



PYLONTECH

LFP Lithium Ion Energy Storage System PowerCube-M3A-100 Operation Manual

Information Version: AS0MM3A10001

US20PM3A1001

This manual introduces PowerCube-M3A-100 from Pylontech. PowerCube-M3A-100 is a high voltage Lithium-Ion Phosphate Battery storage system. Please read this manual before you install the battery and follow the instruction carefully during the installation process. Any confusion, please contact Pylontech immediately for advice and clarification.

Content

1. SAFETY	1
1.1 Symbol.....	2
1.2 Reference standards.....	6
2. SYSTEM INTRODUCE	7
2.1 Product Introduce.....	7
2.2 Specifications.....	7
2.2.1 The parameter of system.....	8
2.2.2 Battery Module (HM3A100).....	9
2.2.3 Control Module.....	11
2.3 System Diagram	16
2.3.1 Multiple battery string parallel connection by CAN communication between MBMS and BMS diagram (battery string qty. ≤ 6).....	16
2.3.2 Multi battery string parallel connection by Ethernet communication between MBMS and BMS diagram (battery string qty. ≥ 1 set).....	16
2.3.3 Diagram between BMS and battery modules.....	16
3. INSTALLATION	17
3.1 Tools.....	17
3.2 Safety Gear.....	18
3.3 System Working Environments Checking.....	18
3.3.1 Cleaning.....	18
3.3.2 Temperature.....	19

3.3.3	Cooling System.....	19
3.3.4	Heating System.....	19
3.3.5	Fire-extinguisher System.....	20
3.3.6	Grounding System.....	20
3.4	Package Items.....	20
3.5	Handling and placement.....	24
3.5.1	Handling and placement of the battery module.....	24
3.5.2	Handling and placement of the rack.....	24
3.5.3	The fix and installation of the rack.....	24
3.5.4	Control Module (BMS) and all Battery Modules install into the Rack.....	25
3.5.5	Install the MBMS into a 19' standard rack [If configured].....	25
3.5.6	Install the Ethernet Switch into a 19' standard rack [If configured].....	25
3.6	Cables connection.....	26
3.6.1	Caution.....	26
3.6.2	Cables Connection.....	27
3.6.2.1	CAN Communication Mode between MBMS and BMS (battery string qty. ≤6 set) (battery string qty. ≤6 set).....	28
3.6.2.2	Ethernet communication between MBMS and BMS (battery string qty ≥7 set).....	29
3.6.3	ADD Switch Setting (Address Assignment).....	30
3.6.3.1	Under communication for single BMS (battery string qty. 1 set).....	30
3.6.3.2	Under CAN Communication Mode between MBMS and BMS (battery string qty. ≤6 set).....	31
3.6.3.3	Under Ethernet communication between MBMS and BMS (battery string qty. 1~32 set).....	31

3.6.3.4	MBMS Communication Mode.....	32
3.6.4	System turns on.....	32
3.6.5	System turns off.....	35
4.	SYSTEM DEBUG.....	38
5.	MAINTENANCE.....	39
5.1	Trouble Shooting:.....	39
5.2	Replacement of main component.....	42
5.2.1	Replacement of Battery Module.....	42
5.2.2	Replacement of Control Module (BMS).....	43
5.2.3	Replacement of 3 rd level Control Module (MBMS).....	45
5.3	Battery Maintenance.....	45
6.	STORAGE RECOMMENDATIONS.....	47
7.	SHIPMENT.....	47
	ANNEX 1: CABLE CONNECTION DIAGRAM (CAN ≤6 SET).....	48
	ANNEX 2: CABLE CONNECTION DIAGRAM (ETHERNET).....	49
	ANNEX 3: INSTALLATION AND SYSTEM TURN ON PROGRESS LIST.....	50
	ANNEX 4: SYSTEM TURN OFF PROGRESS LIST.....	52

1. Safety

The PowerCube-M3A-100 is a high voltage DC system, operated by authorized person only. Read all safety instructions carefully prior to any work and observe them at all times when working on with the system.

PowerCube-H1/H2 est un système à haute tension CC, opéré uniquement par le personnel autorisé. Lisez attentivement toutes les instructions de sécurité avant tout travail et respectez-les à tout moment lorsque vous travaillez avec le système.

Incorrect operation or work may cause:

Une opération ou un travail incorrect peut causer:

- Injury or death to the operator or a third party;
blessure ou mort à l'opérateur ou à un tiers;
- Damage to the system hardware and other properties belonging to the operator or a third party.
Dompage au matériel du système et à d'autres propriétés appartenant à l'opérateur ou à un tiers.

Skills of Qualified Person

Qualified personnel must have the following skills:


Le personnel qualifié doit avoir les compétences suivantes:

- Training in the installation and commissioning of the electrical system, as well as the dealing with hazards;
Formation en matière d'installation et de mise en service du système électrique, et de gestion des risques;
- Knowledge of the manual and other related documents;
Connaissance du manuel et d'autres documents concerné;
- knowledge of the local regulations and directives.
Connaissance des réglementations et directives locales.

1.1 Symbol

	<p>Danger</p> <p><i>Danger</i></p>	<p>Lethal voltage!</p> <p><i>Tension mortelle!</i></p> <ul style="list-style-type: none"> ● Battery strings will produce high voltage DC power and can cause a lethal voltage and an electric shock. <i>La batterie produira un courant continu à haute tension et peuvent provoquer une tension mortelle et un choc électrique.</i> ● Only qualified person can perform the wiring of the battery strings. <i>Seule le personnel qualifié peut effectuer le câblage de la batterie.</i>
	<p>Warning</p> <p><i>Avertissement</i></p>	<p>Risk of battery system damage or personal injury</p> <p><i>Risque d'endommagement du système de batterie ou de blessure corporelle</i></p> <ul style="list-style-type: none"> ● DO not pull out the connectors while the system is working! <i>NE PAS debrancher les connecteurs lorsque le système fonctionne!</i> ● De-energize from all multiple power sources and verify that there is no voltage. <i>Mettez hors tension toutes les sources d'alimentation et vérifiez qu'il n'y a pas de tension.</i>
	<p>Caution</p> <p><i>Attention</i></p>	<p>Risk of battery system failure or life cycle reduces.</p> <p><i>Risque de défaillance ou de réduction de durée de vie du système de batterie.</i></p>
	<p>Symbol in label</p>	<p>Read the product and operation manual before operating the battery system!</p> <p><i>Lisez le manuel du produit avant d'utiliser le système de batterie!</i></p>

	<p>Symbol in label</p>	<p>Danger! Safety! Danger ! Sécurité !</p>
	<p>Symbol in label</p>	<p>Warning electric shock! Avertissement : choc électrique !</p>
	<p>Symbol in label</p>	<p>Do not place near flammable material Ne placez pas à proximité de matériaux inflammables</p>
	<p>Symbol in label</p>	<p>Do not reverse connection the positive and negative. N'inversez pas la connexion des pôles positif et négatif.</p>
	<p>Symbol in label</p>	<p>Do not place near open flame Ne placez pas près d'une flamme nue</p>
	<p>Symbol in label</p>	<p>Do not place at the children and pet touchable area. Ne placez pas à la portée des enfants et des animaux domestiques.</p>
	<p>Symbol in label</p>	<p>Recycle label. Étiquette de recyclage.</p>

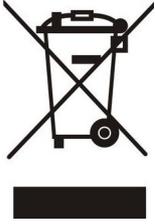	<p>Symbol in label</p>	<p>Label for Waste Electrical and Electronic Equipment (WEEE) Directive (2012/19/EU)</p> <p>Étiquette pour Directive de rebuts d'équipements électriques et électroniques (WEEE) (2012/19/UE)</p>
	<p>Symbol in label</p>	<p>The certificate label for EMC.</p> <p>Étiquette de certificat pour EMC.</p>
	<p>Symbol in label</p>	<p>The certificate label for Safety by TÜV SÜD.</p> <p>Étiquette de certificat de sécurité par TÜV SÜD.</p>
	<p>Symbol in label</p>	<p>The certificate label for Safety by TÜV Rheinland.</p> <p>Étiquette de certificat de sécurité par TÜV Rheinland.</p>
	<p>Symbol in label</p>	<p>The certificate label for Safety by TÜV Rheinland.</p> <p>Étiquette de certificat de sécurité par TÜV Rheinland.</p>

Danger: Batteries deliver electric power, resulting in burns or a fire hazard when they are short



circuited, or wrongly installed.

Les piles fournissent de l'énergie électrique, ce qui entraîne des brûlures ou un risque d'incendie lorsqu'elles sont court-circuitées ou mal installées.



Danger: Lethal voltages are present in the battery terminals and cables. Severe injuries or death may occur if the cables and terminals are touched.

Des tensions mortelles sont présentes dans les bornes et les câbles de la batterie. Des

blessures graves, voire mortelles, peuvent survenir si les câbles et les bornes sont touchés.



Warning: Do not open or deform the battery module;

Ne pas ouvrir ou déformer le module de batterie.

Warning: Whenever working on the battery, wear suitable personal protective equipment (PPE) such as rubber gloves, rubber boots and goggles.

Chaque fois que vous travaillez sur la batterie, portez un équipement de protection individuelle (PPE) approprié, tel que des gants en caoutchouc, des bottes en caoutchouc et des lunettes de protection.



Warning: PowerCube-M3A-100 system working temperature range: 10°C~40°C;

Optimum temperature: 18°C~28°C. Out of the working temperature range may cause the battery system over / low temperature alarm or protection which further lead to the cycle life reduction as well as. It will affect the warranty terms as well.

Plage de température de fonctionnement du système PowerCube-H1/H2: 0°C – 50°C ; température optimale: 18°C-28°C. En dehors de la plage de température de fonctionnement, la batterie risque de réduire sa durée de vie et même l'alarme de protection contre les températures trop élevées ou trop basses du système de batterie. Cela affectera la garantie.



Warning: For battery installation, the installer shall refer to NFPA70 standard for operation.

Avertissement :

Lors du montage extérieur de la batterie, le montage doit être réalisé conformément à la Norme NFPA70.



Caution: Improper settings or maintenance can permanently damage the battery.

Le réglage ou la maintenance incorrecte peuvent endommager en permanence la batterie.



Caution: Incorrect inverter parameters will lead to the premature aging of battery.

Les paramètres de l'inverseur incorrects entraîneront un vieillissement prématuré de la batterie.

1.2 Reference standards

No	Description	Code
1	Safety standard for secondary lithium batteries	IEC62619
2	UN38.3 Safe transport standard	UN38.3
3	CE EMC Standard CE EMC Directive 2014/30/EU	EN IEC 61000-6-1:2019 EN IEC 61000-6-2:2019 EN 61000-6-3:2007+A1 EN 61000-6-4:2007+A1 IEC 61000-6-1:2016 IEC 61000-6-2:2016 IEC 61000-6-3:2006+A1 IEC 61000-6-4:2018
4	Battery Cell safety standard	UL1642
5	Battery Cell safety standard	UL1973
6	Battery Cell safety standard	JIS C 8715-2
7	Battery safety standard	UL9540A
8	safety standard for electrical devices CE LVD Directive 2014/35/EU	IEC62477-1
9	Safety Standard for Lithium Battery (US)	UL1973

2. System Introduce

2.1 Product Introduce

PowerCube-M3A-100 is a high voltage battery storage system based on lithium iron phosphate battery, is one of new energy storage products developed and produced by Pylontech, it can be used to support reliable power for various types of equipment and systems. PowerCube-M3A-100 is especially suitable for application scene of high power, limited installation space, restricted load-bearing and long cycle life.

2.2 Specifications



2.2.1 The parameter of system


Product Type	PowerCube-M3A-100	PowerCube-M3A-100
System Voltage	<1000V	<1500V
Controller Type	S1000M3A100	S1500M3A100
Nominal voltage	38.4V × n (where n = 1~19)	38.4V × n (where n = 1~32)
Rated capacity	148Ah	148Ah
Total Storage Energy	5.6832 × n (where n = 1~19)	5.6832 × n (where n = 1~32)
Upper limit charging voltage	43.2V× n (where n = 1~19)	43.2V× n (where n = 1~32)
Final discharge voltage	32.4V× n (where n = 1~19)	32.4V× n (where n = 1~32)
Nominal Current	29.6A	29.6A
Max. Continuous Current	74A	74A
Operation temp. range	10 ~ 40℃	10 ~ 40℃
Communication type	CANBUS/Modbus RTU/TCP/IP	CANBUS/Modbus RTU/TCP/IP
Storage temp. range	-20 ~ 60℃	-20 ~ 60℃
Humidity	5 – 95% (without condensing)	5 – 95% (without condensing)
Round-trip efficiency (@1C-rate)	95%	95%
Depth of Discharge	90%	90%
Dimension	805mm(W)*845mm(D)*2130mm(H)	1185mm(W)*845mm(D)*2310mm(H)
Weight	140+ 55×n (where n = 1~19) kg	180+ 55×n (where n = 20~34) kg
Operation cycle life	>5,000	>5,000
Operation Life(Years)	15+	15+
IP rating	IP20	IP20
Cooling type	Natural cooling	Natural cooling
Altitude [m]	<4,000	<4,000
Certification	UL1973, IEC62477-1, IEC62619, CE LVD, CE EMC, UN38.3	UL1973, IEC62477-1, IEC62619, CE LVD, CE EMC, UN38.3

2.2.2 Battery Module (HM3A100)



Product Type	HM3A100
Cell Technology	Li-ion (LFP)
Battery Module Capacity (kWh)	5.6832
Battery Module Voltage (Vdc)	38.4
Battery Module Capacity (AH)	148
Dimension (W*D*H, mm)	315×820×171.5
Protection Class	IP20
Weight (kg)	55
Operation Cycle Life	5,000
Operation Temperature	0~50°C
Storage Temperature	-20~60°C
Transportation Certificate	UN38.3

Battery Module (HM3A100) Front Interface

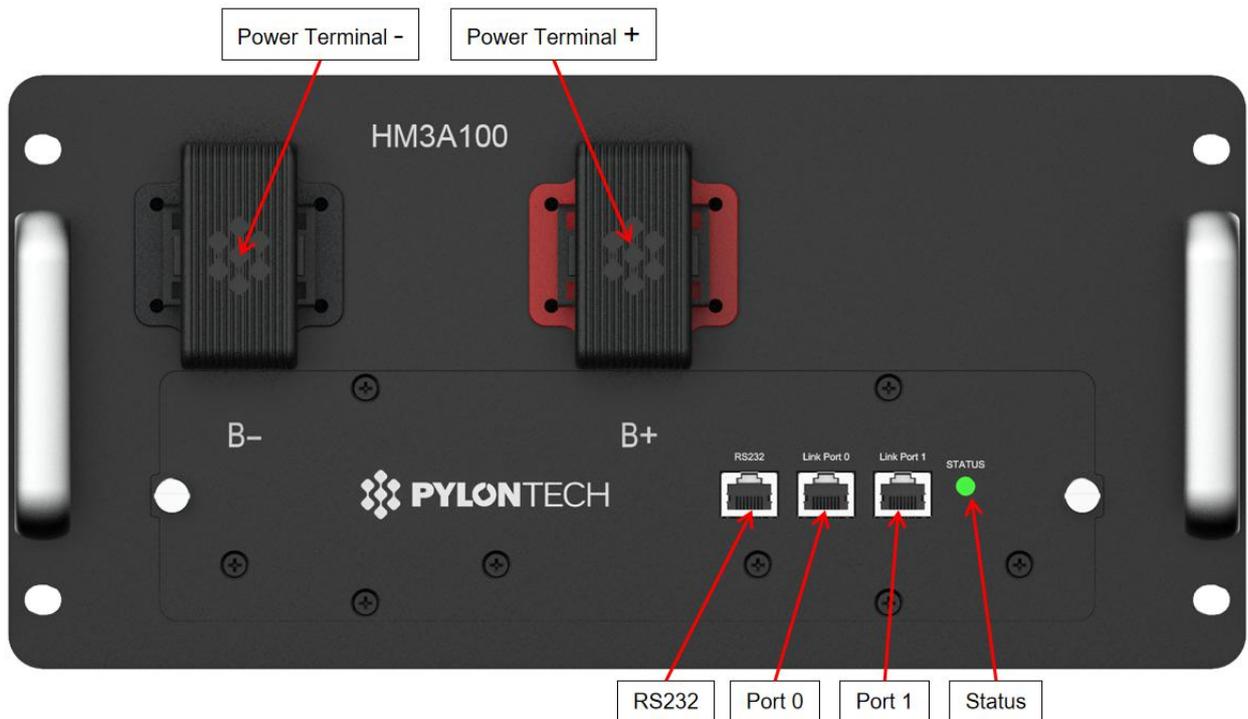

Power Terminal B+/B-

To connect battery series power cables.

Status

Status light: to show the battery module's status (Normal ●, Abnormal ●).

RS232 Terminal

Console Communication Terminal: (RJ45 port) follow RS232 protocol, for manufacturer or professional engineer to debug or service.

Link Port 0, 1

Link Port 0, 1 Communication Terminal: (RJ45 port), CAN communication, between multiple serial battery modules and control module.

Power Terminals

The power cable terminal is O-ring type (M8 screw).

The terminal has a plastic cover which need to be add on after finishing the wiring connection. Dismantle of the cover must use attached special tool. Insert the tool into the 4 holes of the cover.




2.2.3 Control Module

PowerCube-M3A-100's Control Module with **external** power supply has two version, up to 1000V(S1000M3A100) operation or up to 1500V(S1500M3A100) operation.



Product Type	S1000M3A100	S1500M3A100
Related Product	M3A-100	M3A-100
AC Supply for BMS	100 - 290Vac/50Hz/1.3A	100 - 290Vac/50Hz/1.3A
System Operation Voltage (Vdc)	0~1000	0~1500
Operation Current (Max.) (A)	100	100
Self-consumption Power(W)	8	8
Dimension (W*D*H, mm)	315×710×171.5	315×710×171.5
Communication	MODBUS RTU\CAN	MODBUS RTU\CAN
Protection Class	IP20	IP20
Weight(kg)	15.5	19
Operation Life (Years)	15+	15+
Operation Temperature(°C)	-20~65	-20~65
Storage Temperature(°C)	-40~80	-40~80

Control Module (S1000M3A100/S1500M3A100) Front Interface

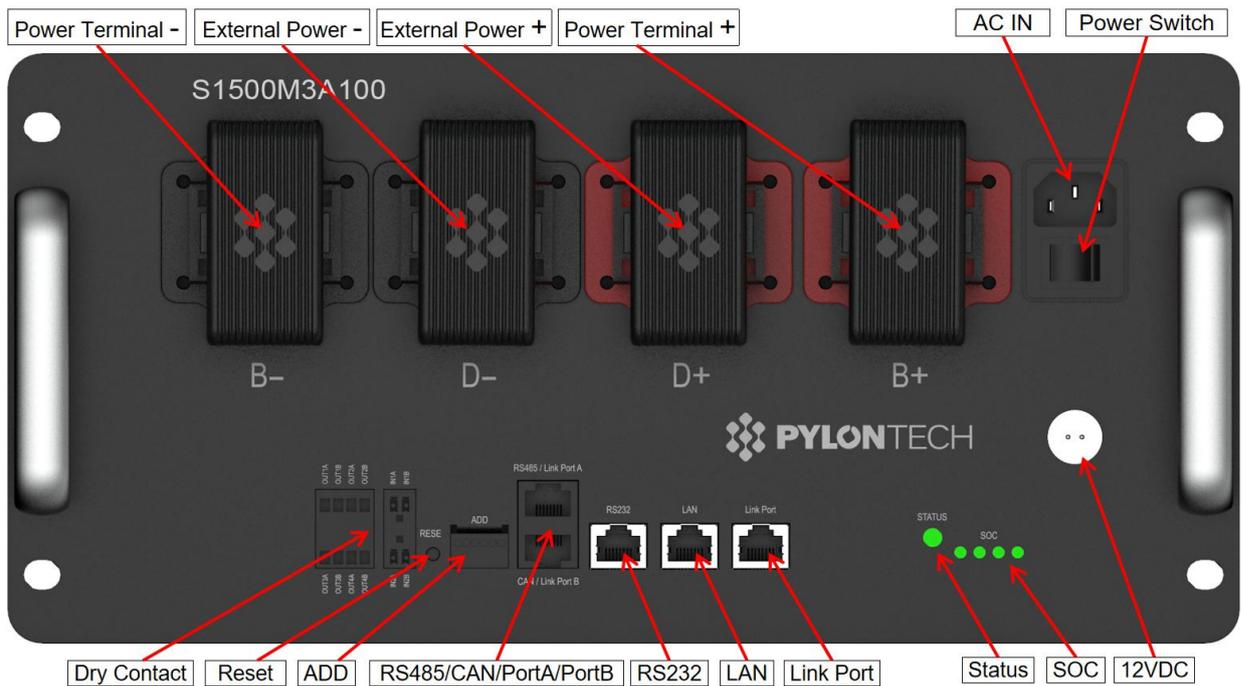

External Power Terminal D+/D-

Connect battery system with Inverter.

Power Terminal B+/B-

To connect battery power cables in series.


12VDC Out

OUT: Power supply for MBMS, to connect with MBMS' 12VDC IN.

AC Input for BMS power supply


AC Socket and Control Module Power Switch: External power supply for Control Module, has an Australia or Europe standard AC Power input socket. Power Switch to control ON/OFF. Applied with UPS system.

Australia Standard

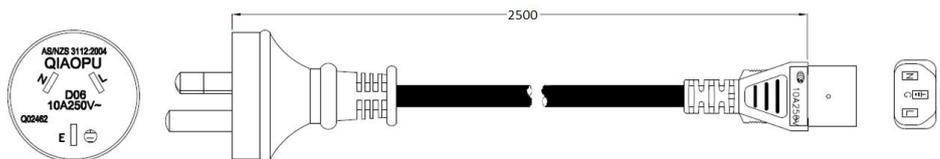

Or

Europe Standard

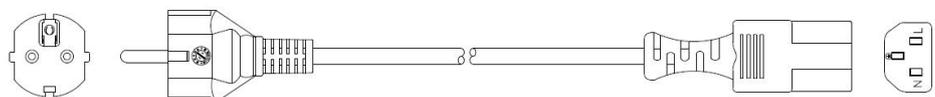



Caution: It shall be installed an AC breaker outside for AC short-circuit protection. The specifications of the breaker shall meet the system's parameters. System parameters refer to the system parameters table (chapter 2.2.1)

Attention: il doit être installé un disjoncteur CA à l'extérieur pour la protection contre les courts-circuits CA.

Dry Contact Terminal

Dry Contact Terminal: provided 2 input and 4 output dry contact signal.

Reset

Reset Button: Long press this button to restart the battery system.

ADD

ADD: 6 bit dial switches to manually distribute the communication address of the battery system. Nether position is OFF, means "0". Upper position is ON, means "1". 1st bit to 5th bit is for address, and the 6th bit dial switch support a 120 Ω resistance.

CAN / RS485

CAN Communication Terminal: (RJ45 port) follow CAN protocol, for communication between battery system and inverter.

RS485 Communication Terminal: (RJ45 port) follow Modbus RTU/TCP/IP protocol, for communication between battery system and inverter.

RS232 Terminal

Console Communication Terminal: (RJ45 port) follow RS232 protocol, for manufacturer or professional engineer to debug or service.

LAN Terminal


Console Communication Terminal: (RJ45 port) follow Modbus 485 protocol, used for communication between BMS and switches.

Link Port

Link Port Communication Terminal: (RJ45 port) follow RS485 protocol, for communication between multiple serial battery modules and control module.

Definition of RJ45 Port Pin

No.	CAN	RS485	RS232
1	---	---	---
2	GND	---	---
3	---	---	TX
4	CANH	---	---
5	CANL	---	---
6	---	GND	RX
7	---	RS485A	---
8	---	RS485B	GND

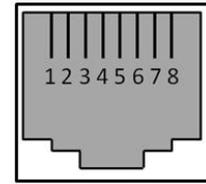

RJ45 Port



RJ45 Plug

Status

Status light: to show the battery module's status (RUN●, Alarm and Protection●).

LED Status Indicators

✧ Battery capacity indicator: 4 green lamps, each light represents 25% capacity.


LED Indicators Instructions

Battery Status	Protection / Alarm / Normal	STATUS (green)	STATUS (red)	Capacity SOC				Descriptions
								
Shut Down		Off	Off	Off	Off	Off	Off	All off
Sleep	Normal	Flash2	Off	Off	Off	Off	Off	Indicates Sleep Mode, to save the power.
Standby	Normal	Light	Off	Off	Off	Off	Off	Indicates save power mode.
	Alarm	Light	Off	Off	Off	Off	Off	Indicates the battery voltage or temperature is high or low.
Charge	Normal	Light	Off	The highest capacity indicator LED flashes (flash 2), others lighting				The highest capacity indicator LED flashes (flash 2), others lighting, horse race lamp when SOC >= DODH;
	Alarm	Light	Off					
	Protection	Off	Light	Off	Off	Off	Off	Stop charging, STATUS(red) lighting
Discharge	Normal	Flash2	Off	Indicate based on capacity				Indicate based on capacity
	Alarm	Flash2	Off					
	Protection	Off	Light	Off	Off	Off	Off	Stop discharging, STATUS(red) lighting
Abnormal	Power On Fault	Off	flash 4	Off	Off	Off	Off	Stop charging/discharging, STATUS(red) lighting
	STL Fault	Off	flash 2	flash 2				
	Other Fault	Off	light	Off	Off	Off	Off	


Note: The flashing instructions, flash 1 - light 0.25s / off 3.75 seconds; flash 2 - 0.5s light / 0.5s off; flash 3 - 0.5s light / 1.5s off; flash 4 - 1s light / 1s off .

2.3 System Diagram


2.3.1 Multiple battery string parallel connection by CAN communication between MBMS and BMS diagram (battery string qty. ≤ 6)

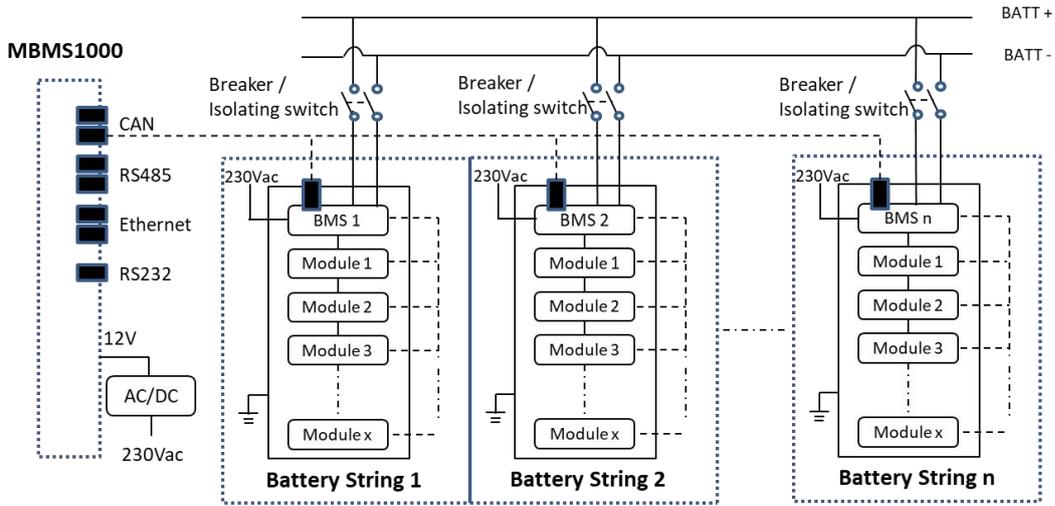

2.3.2 Multi battery string parallel connection by Ethernet communication between MBMS and BMS diagram (battery string qty. ≥ 1 set)

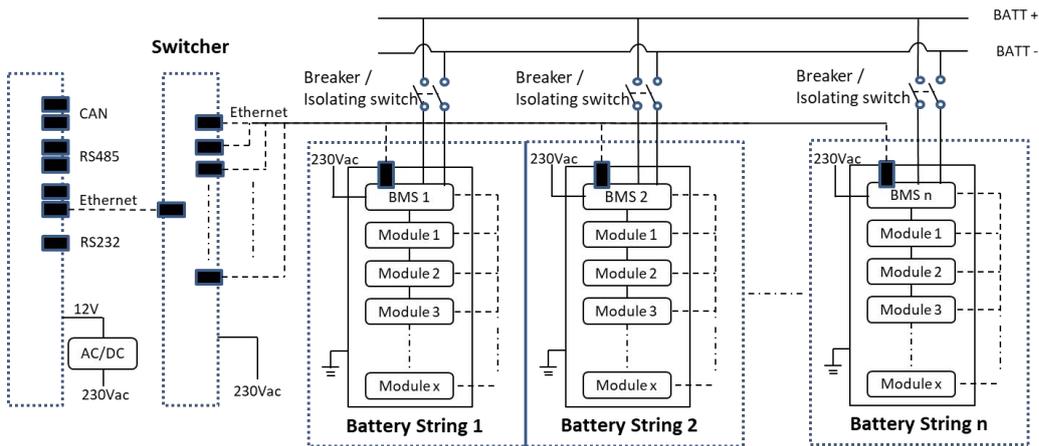

2.3.3 Diagram between BMS and battery modules:

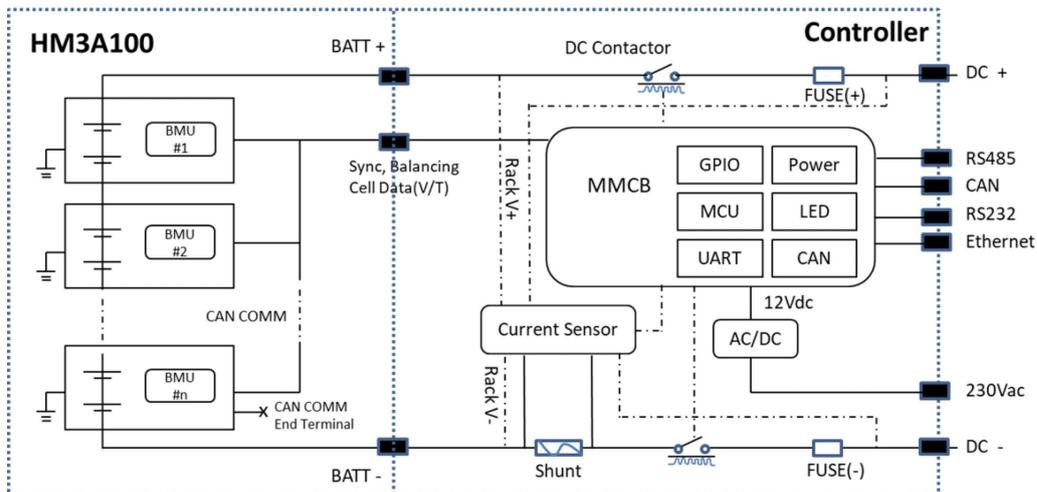

3. Installation

Please check every installation step with <Annex 2: Installation and System Turn ON Progress List> during the install.

3.1 Tools

The following tools are required to install the battery pack:

 <p>Wire Cutter</p>	 <p>Crimping Modular Plier</p>	 <p>Cable Ties</p>
 <p>Screw Driver Set</p>	 <p>Electric Screw Driver</p>	 <p>Insulating Gloves</p>
 <p>Adjustable Wrench</p>	 <p>1500VDC Isolating nut drivers</p>	 <p>2000VDC Multimeter</p>

NOTE

Use properly insulated tools to prevent accidental electric shock or short circuits.

If insulated tools are not available, cover the entire exposed metal surfaces of the available tools, except their tips, with electrical tape.

3.2 Safety Gear



It is recommended to wear the following safety gear when dealing with the battery pack.

Il est recommandé de porter l'équipement de sécurité suivant lors de l'opération de la batterie.



Insulating gloves

Gants isolés



Safety goggles

Lunettes de sécurité



Safety shoes

Chaussures de sécurité

3.3 System Working Environments Checking

3.3.1 Cleaning



The battery system has high voltage connectors. The clean condition will cause the isolation characteristic of the system.

Le système de batterie a des connecteurs à haute tension. La condition de nettoyage entraînera la caractéristique d'isolation du système.

Before installation and system working must clean the dust and iron scurf to keep the environments cleaning. And the environment must have certain anti-dust ability.

Avant l'installation et le fonctionnement du système, vous devez éliminer la poussière et le copeau de fer pour maintenir l'environnement propre. Et l'environnement doit avoir une certaine capacité anti-poussière.

The system after long term running must check the humidity and dust cover or not. If heavy dust cover with high humidity on the system should stop the system running and make clean specially for the high voltage connectors.

Après une longue période de fonctionnement, le système doit vérifier l'humidité et le pare-poussière ou non. En cas de forte couverture de poussière avec une humidité élevée sur le

système, celui-ci doit être arrêté et doit être nettoyé spécialement pour les connecteurs à haute tension.



Danger: the power cables and plugs still have high voltage DC power from serial connected battery modules (battery module can't be turned off), must be careful to handle the Power Plugs.

Les câbles d'alimentation et les fiches sont toujours alimentés en courant continu à haute tension par les modules de batterie connectés en série (le module de batterie ne peut pas être désactivé), vous devez donc manipuler les fiches avec précaution.

3.3.2 Temperature

PowerCube-M3A-100 system working temperature range: 10°C~40°C; Optimum temperature:



18°C~28°C.

Plage de température de fonctionnement du système PowerCube-M3A-100: 10°C-40°C; température optimale: 18°C-28°C.

Caution: Out of the working temperature range may cause the battery reduces the cycle of life even cause the battery system over / low temperature alarm or protection.

En dehors de la plage de température de fonctionnement, la batterie risque de réduire sa durée de vie et même de déclencher une alarme ou une protection contre les températures trop élevée ou trop basses.

3.3.3 Cooling System



The room must be equipped with cooling system.

La salle doit être équipée d'un système de refroidissement.

Caution: Out of the working temperature range may cause the battery reduces the cycle of life even cause the battery system over / low temperature alarm or protection.

En dehors de la plage de température de fonctionnement, la batterie risque de réduire sa durée de vie et même de déclencher une alarme ou une protection contre les températures trop élevées ou trop basses.

3.3.4 Heating System



The room must be equipped with heating system. If the environment is lower than 0°C, must turn on the heating system at first.

La salle doit être équipée d'un système de chauffage. Si la température ambiante est inférieure à 0°C, vous devez d'abord allumer le système de chauffage.

Caution: Out of the working temperature range may cause the battery reduces the cycle of life even cause the battery system over / low temperature alarm or protection.

En dehors de la plage de température de fonctionnement, la batterie risque de réduire sa durée de vie, voire de déclencher une alarme ou une protection contre les températures trop élevées ou trop basses du système de batterie.

3.3.5 Fire-extinguisher System



The room must be equipped with fire-extinguisher system for lithium-ion battery.

La salle doit être équipée d'un système d'extinction d'incendie pour batterie lithium-ion.

The fire system needs to be regularly checked to be in normal condition. Refer to the using and maintenance requirements of local fire equipment relevant.

Le système d'incendie doit être vérifié régulièrement pour être en état normal. Reportez-vous aux exigences d'utilisation et de maintenance des équipements anti-incendie locaux.

3.3.6 Grounding System



Before the battery installation must sure the grounding point of the basement is stable and reliable. If the battery system is installed in an independent equipment cabin (e.g. container), must make sure the grounding of the cabin is stable and reliable.

Avant l'installation de la batterie, vous devez vous assurer que le point de mise à la terre du sous-sol soit stable et fiable. Si le système de batterie est installé dans une cabine d'équipement indépendante (conteneur, par exemple), vous devez vous assurer que la mise à la terre de la cabine soit stable et fiable.

The resistance of the grounding system must $\leq 100m\Omega$

La résistance du système de mise à la terre doit être $\leq 100 m\Omega$.

3.4 Package Items

Accessories

The type and quantity of the accessories are subject to the battery packing list.

NOTE

The terminal has a plastic cover, which must use attached special tool to. Insert the tool into the 4 holes of the cover.



The ring terminals (M8 screw) use 13mm sleeve.


Unpacking and check the Packing List:

- Internal Cable Kits for wiring connection up to Battery Controller

Power Copper Bar - Battery Module and Main Controller -	Black/209*28*20*3mm/Soft Copper Bar/Ø9 Ring Type Terminals	pcs	1pcs
---	--	-----	------



Power Cable (Battery Module Upper and Lower Serial Connection)	Black/209*133*20*3mm/Soft Copper Bar/Ø9 Ring Type Terminals	pcs	17pcs
--	---	-----	-------

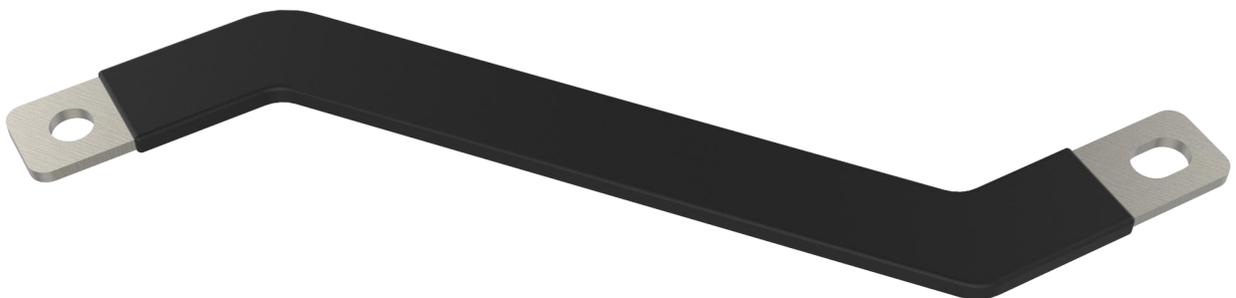


Power Cable (Battery Module Left and Right rack Serial Connection)	Black/349*135*20*3mm/Soft Copper Bar/Ø9 Ring Type Terminals	pcs	1 pcs
--	---	-----	-------




Power Copper Bar - Battery Module and Main Controller +	Orange/370*135*20*3mm/Soft Copper Bar/Ø9 Ring Type Terminals	pcs	1 pcs
---	--	-----	-------



Battery Cascade Communication Cable (0.18m)	Black/0.18m/8 Core Super 5th Class Twisted-pair Wire/RJ45	pcs	1 pcs
---	---	-----	-------

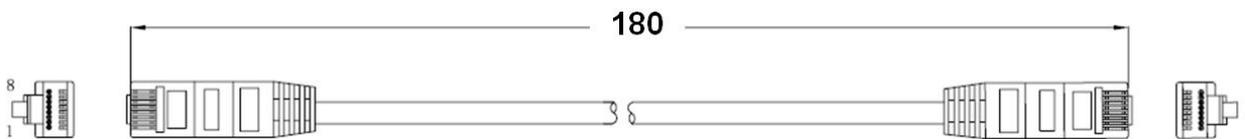


Battery Cascade Communication Cable (0.5m)	Black/0.5m/8 Core Super 5th Class Twisted-pair Wire/RJ45	pcs	1 pcs
--	--	-----	-------

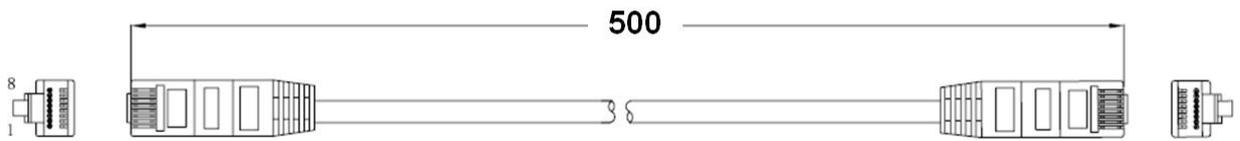


- External Cable Kits for wiring connection from Battery Controller to PCS/EMS/Power Supply


External Battery CAN Communication Cable (direct)	Black/5m/Super 5th Class Twisted-pair Wire/2 RJ45 terminal	pcs	1 pcs
--	---	-----	-------

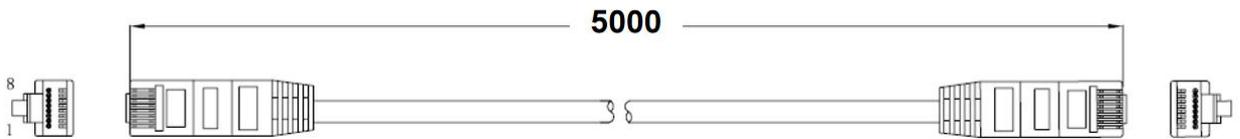

External Power Cable +	Orange/5m/1/0AWG/SURLOK Terminal/50-8 Terminal	pcs	1 pcs
------------------------	---	-----	-------

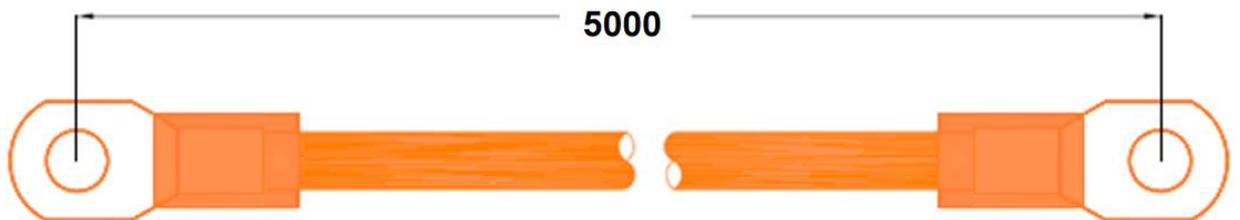


External Power Cable -	Black/5m/1/0AWG/SURLOK Terminal/50-8 Terminal	pcs	1 pcs
------------------------	--	-----	-------

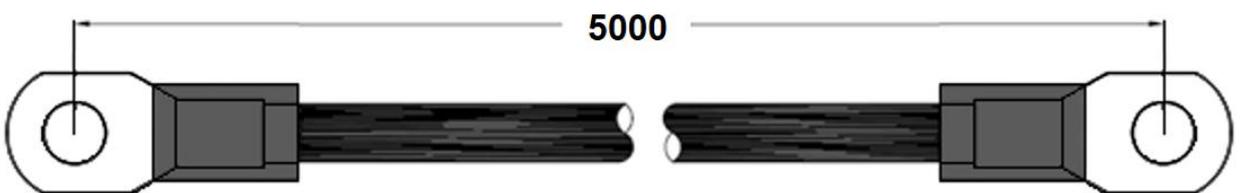

For external power supply control module there is additional AC power cable:

AC Power Cable (Australia Standard)	Black/7m/3*0.75mm2/Australia Standard	pcs	1 pcs
--	--	-----	-------

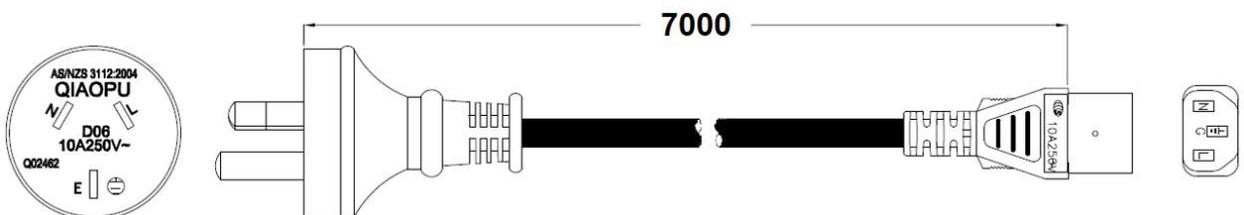

3.5 Handling and placement



Warning: The battery rack is IP00. It must be installed in a restricted access area;

Le support de batterie est IP00. Il doit être installé dans une zone d'accès restreint.

Warning: The PowerCube-M3A-100 is a high voltage DC system, operated by qualified and authorized person only.

PowerCube-M3A-100 est un système CC à haute tension, opéré uniquement par le personnel qualifié et autorisé.

3.5.1 Handling and placement of the battery module



Single battery module is 55kg. If without handling tools must more than 3 personnel to handling with it. If install in high place of the rack it must more than 4 men, or use **Lifting device**.

Un module de batterie pèse de 55kg. Sans outils de manipulation, il est nécessaire de plus de 3 hommes pour manipuler avec lui. Si vous l'installez en hauteur, il faut plus de 4 hommes.


3.5.2 Handling and placement of the rack

If without handling tools must more than 4 personnel to handling with it.

3.5.3 The fix and installation of the rack

The rack must be fixed on the basement and secure on the wall with M20 screws (use 30mm sleeve).

Battery rack basement holes bitmap (unit: mm):

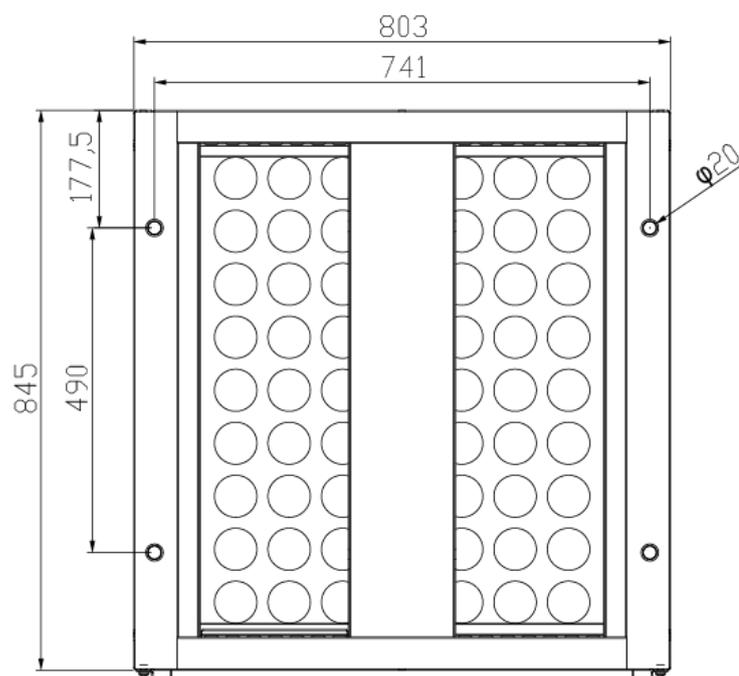

3.5.4 Control Module (BMS) and all Battery Modules install into the Rack

- Dismantle the **rack metal strip** (on the left side and right side of the rack). After installed the control module (BMS) and all battery modules need install the metals strips back for security.
- Install the **buckle nuts**. The position of nuts must meet the position of the control module (BMS) and all battery modules.
- Install the control module (BMS) and all battery modules in. Each module uses 4 **screws** to fix it.



Caution: The controller only has fuses inside. So it is necessary to equip a breaker or isolating switch outside for maintenance. The specifications of the breaker/isolation shall meet the system's parameters. System parameters refer to the system parameters table (chapter 2.2.1)

Attention: il doit être installé un disjoncteur CA à l'extérieur pour la protection contre les courts-circuits CA. Les spécifications du disjoncteur doivent répondre aux paramètres du système. Les paramètres système se réfèrent au tableau des paramètres système (chapitre 2.2.1)

3.5.5 Install the MBMS into a 19' standard rack [If configured]

- Install the **buckle nuts**. The position of nuts must meet the position of the MBMS.
- Install the MBMS in. Uses 4 **screws** to fix it.

3.5.6 Install the Ethernet Switch into a 19' standard rack [If configured]

- Install the **buckle nuts**. The position of nuts must meet the position of the Ethernet Switch.
- Install the Ethernet Switch in. Uses 4 **screws** to fix it.

3.6 Cables connection

3.6.1 Caution:



Danger: The battery system is high voltage DC system. Must make sure the grounding of the rack is stable and reliable.

Le système de batterie est un système CC à haute tension. Vous devez vous assurer que la mise à la terre du rack soit stable et fiable.



Danger: All the plugs and sockets of the power cables must be **orange to orange and black to black**. Otherwise it will cause personal injury.

*Toutes les fiches et prises des câbles d'alimentation doivent être **orange à orange et noir à noir**. Sinon, cela causera des blessures.*



Danger: Isolation breakers or switches for each battery string must be installed for maintenance.

Un disjoncteur d'isolement ou un commutateur doivent être installés pour chaque batterie.



Danger: No short circuit or reserved connection of the battery system's anode and cathode.

Toutes les fiches et prises des câbles d'alimentation doivent être orange à orange et noir à noir. Sinon, cela causera des blessures.



Caution: Wrong communication cables connection will cause the battery system failure.


Une mauvaise connexion des câbles de communication entraînera une défaillance du système de batterie.

Grounding



The PowerCube-M3A-100 modules' grounding is based on metal directly touch between the module's surface and rack's surface. So it needn't grounding cables at all. If uses normal rack, remove the paint at the corresponding place.

La mise à la terre des modules PowerCube-M3A-100 repose sur le contact direct des métaux entre la surface de module et celle du rack. Il n'est donc pas nécessaire de mettre les câbles à la terre. Si vous utilisez un rack normal, il est possible d'enlever la peinture aux positions correspondantes.

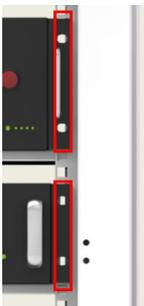


Rack Grounding:

If there is a grounding metal frame outside the rack, for example, the metal angle steel frame at the bottom of the container, the fix hole of the fix frame can be fixed directly with the metal frame of the container. Then through the grounding of the container to ensure reliable grounding.

The cable shall be copper with yellow-green color.

The ground cable can also be connected from the M8 grounding bolt on the frame base.

Grounding cable must be $\geq 6\text{AWG}$.

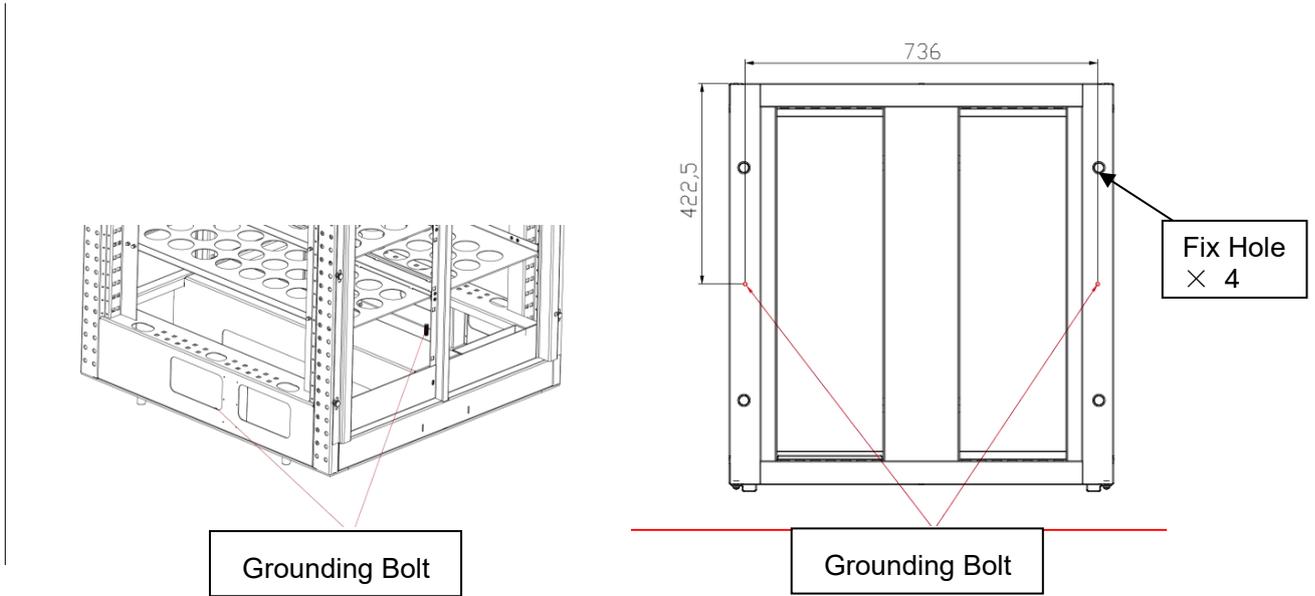


3.6.2 Cables Connection

Note: The terminal has a plastic cover, which must use attached special tool to. Insert the tool into the 4 holes of the cover.



3.6.2.1 CAN Communication Mode between MBMS and BMS (battery string qty. ≤ 6 set)
 (battery string qty. ≤ 6 set)


When system configured PowerCube-M3A-100 ≤ 6 set. The communication between PowerCube-M3A-100 uses CAN communication mode. The communication between the MBMS and the BMS of 1st PowerCube-M3A-100 uses CAN communication mode.

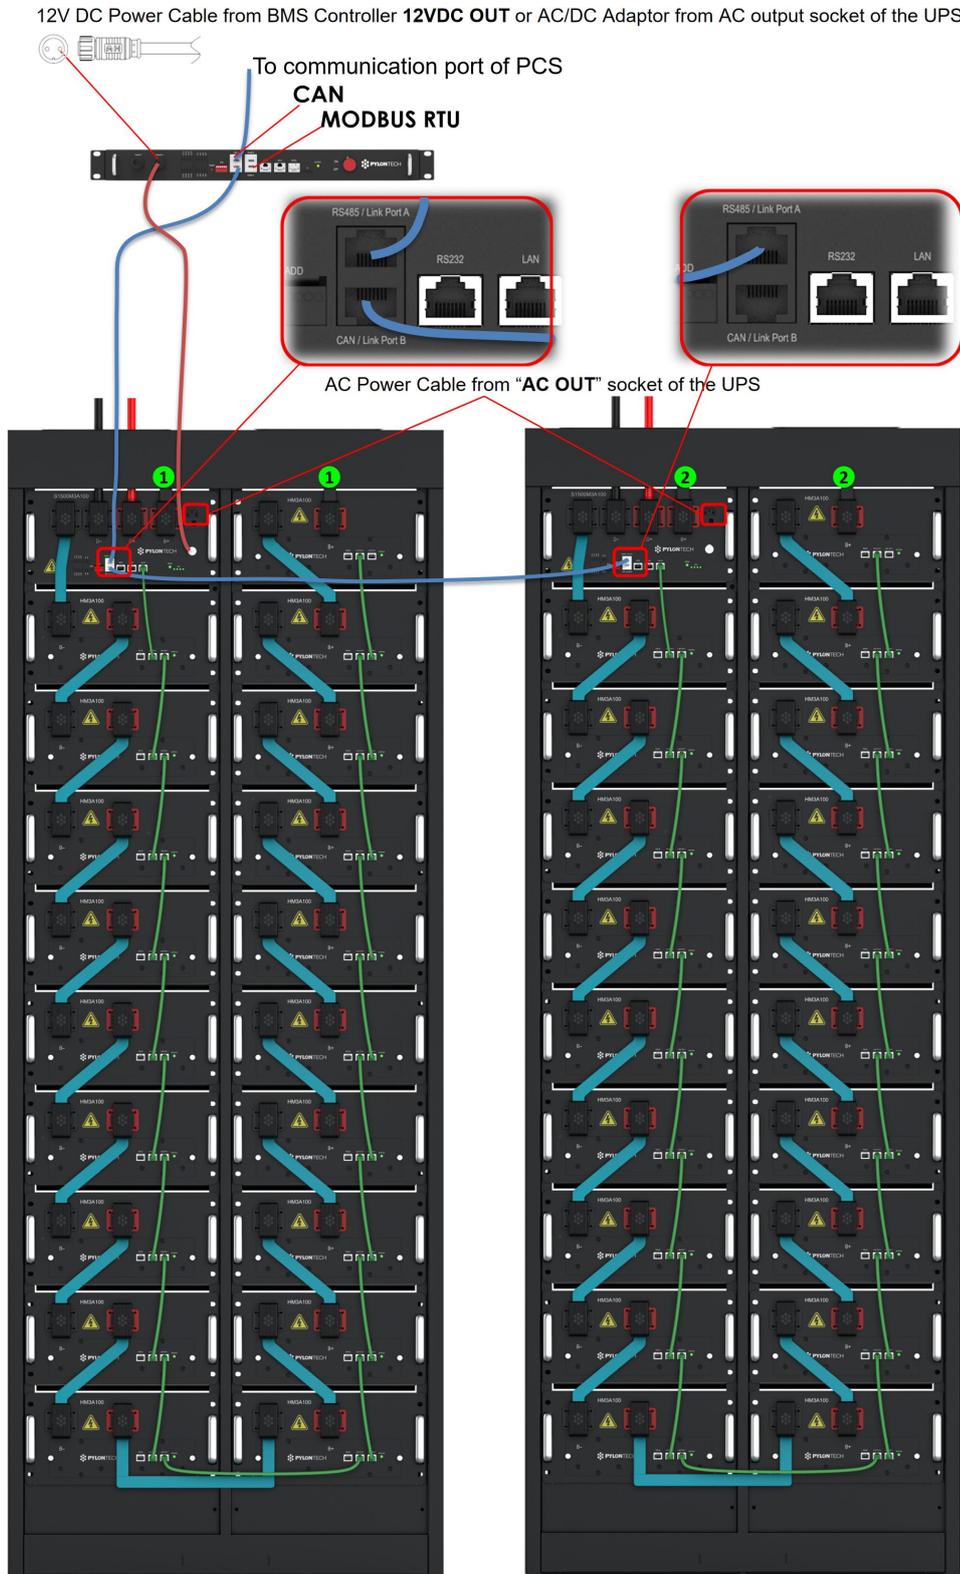

Note: The 1st PowerCube-M3A-100 should be installed nearest by the MBMS.

3.6.2.2 Ethernet communication between MBMS and BMS (battery string qty ≥ 7 set)

- A. When system configured PowerCube-M3A-100 ≥ 7 set. The communication between PowerCube-M3A-100s and MBMS uses Ethernet Switch by LAN communication.

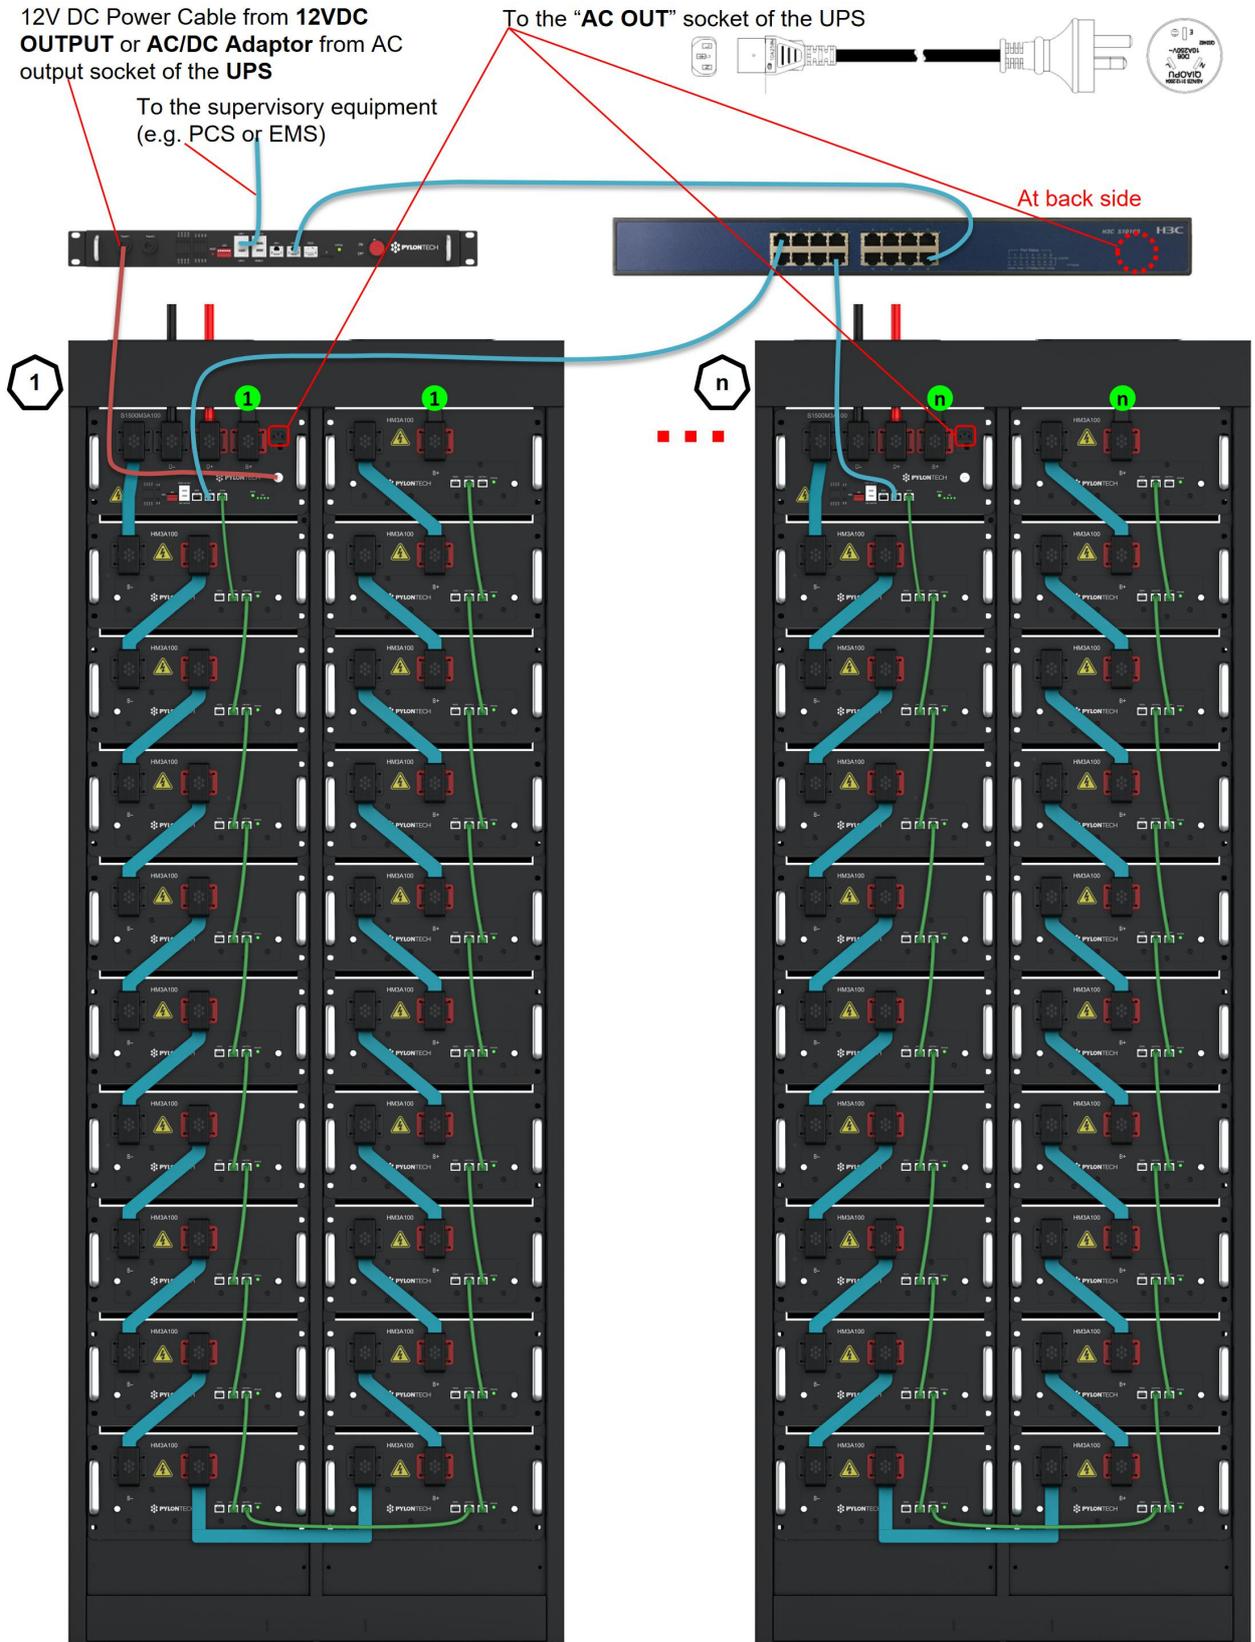

B. Relation of MBMS and battery strings (PowerCube-M3A-100s) in the ports of Ethernet Switch

The both side of BMS to MBMS communication cable must be marked with labels.

Les deux côtés du câble de communication de BMS à MBMS doivent être marqués avec des étiquettes.



The last port of Ethernet Switch is for the MBMS.

Les deux côtés du câble de communication de BMS à MBMS doivent être marqués avec des étiquettes.




From the 1st port to the nth port are for the corresponding battery string (PowerCube-M3A-100).

So we can fastest find out the corresponding battery string on the Ethernet Switch.

Du 1er port au même port correspondent à la chaîne de batterie correspondante (PowerCube-M1). Ainsi, nous pouvons trouver rapidement la chaîne de batterie correspondante sur le commutateur Ethernet.

3.6.3 ADD Switch Setting (Address Assignment)

ADD Switch - Battery Controller is a 6 bit dial switches to manually distribute the communication address of the battery system. Down position is OFF, means "0". Up position is ON, means "1". 1st bit to 5th bit is for address, and the 6th bit dial switch support a 120 Ω resistance (**Terminal Resistance**).

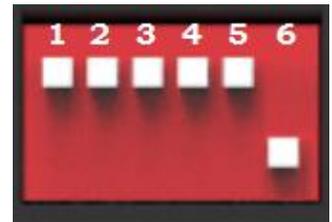


ADD Switch - MBMS is a 6 bit dial switches to manually distribute the communication address of the battery system. Down position is OFF, means "0". Up position is ON, means "1". 1st bit to 4th bit is for address, the 5th and the 6th bit dial switch support a 120 Ω resistance (Terminal Resistance).

3.6.3.1 Under communication for single BMS (battery string qty. 1 set)

The BMS's first five bits must set in below <**BMS's Address Configure**

Table>. The last BMS's terminal resistance must set in "1" (X=1);

The address is configured follow ASCII code: ("X" is terminal resistance).

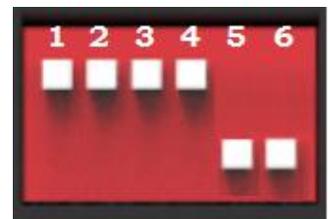


BMS's Address Configure Table:

CAN	Modbus	Address dial bit
0	1	00000X
1	1	10000X
2	2	01000X
3	3	11000X
4	4	00100X
5	5	10100X
6	6	01100X

3.6.3.2 Under CAN Communication Mode between MBMS and BMS (battery string qty. s6 set)

The BMS's first five bits must set in below <**BMS's Address Configure Table**>. The last BMS's terminal resistance must set in "1" (X=1), and other BMS's terminal resistance must set in "0".

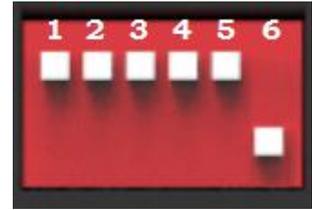

The address is configured follow ASCII code: ("X" is terminal resistance).

BMS's Address Configure Table:

The MBMS's ADD Switch set with "000011". The last 2 bits are terminal resistances.

Note: the 1st to 4th bit dial for MBMS refer to 3.6.3.4.

Battery String	Address Bit
1	10000X
2	01000X
3	11000X
4	00100X
5	10100X
6	01100X

3.6.3.3 Under Ethernet communication between MBMS and BMS (battery string qty. 1~32 set)

The BMS's first five bits must set in above <**BMS's Address Configure Table**>. The BMS' terminal resistance must set in "0".



The address is configured follow ASCII code: ("X" is terminal resistance).

BMS's Address Configure Table:

Battery String	Address Bit						
1	10000X	9	10010X	17	10001X	25	10011X
2	01000X	10	01010X	18	01001X	26	01011X
3	11000X	11	11010X	19	11001X	27	11011X
4	00100X	12	00110X	20	00101X	28	00111X
5	10100X	13	10110X	21	10101X	29	10111X
6	01100X	14	01110X	22	01101X	30	01111X
7	11100X	15	11110X	23	11101X	31	11111X
8	00010X	16	00001X	24	00011X	32	00000X

The MBMS's ADD Switch set with "000011". The last 2 bits are terminal resistances.

Note: the 1st to 4th bit dial for MBMS refer to 3.6.3.4.

3.6.3.4 MBMS Communication Mode

In some project it configures multi Energy Storage Systems. In this case will have multi MBMS. The address of MBMS must follow <MBMS's Address Configure Table>

CAN	MODBUS	address dial bit 1~4
0	1	0000
1	1	1000
2	2	0100
3	3	1100
4	4	0010
5	5	1010
6	6	0110
7	7	1110
8	8	0001
9	9	1001
10	10	0101
11	11	1101
12	12	0011
13	13	1011
14	14	0111
15	15	1111

3.6.4 System turns on



Double check all the power cables and communication cables. Make sure the voltage of the PCS is same level with the battery system. Check all the power switch of every battery system is OFF.

Vérifiez deux fois tous les câbles d'alimentation et les câbles de communication. Assurez-vous que la tension du PCS est identique à celle du système de batterie. Vérifiez que l'interrupteur de chaque système de batterie soit éteint.



Warning: MBMS must be turned on **AFTER** all battery strings self-check finish.

MBMS doit être activé une fois le contrôle automatique des chaînes de batterie terminé.



Warning: The external switch or breaker between PCS and battery string must be off before the battery system power on.

Un interrupteur ou disjoncteur externe entre le PC et la chaîne de batterie doit être désactivé avant que le système de batterie ne soit alimenté.


System turns on step:

- (1) Check the UPS(if has) is turned on. And the UPS is power supplying.
- (2) Switch the external power or PCS on, make sure all the power equipment can work normally.
- (3) Confirm the MBMS **is off**.
- (4) Turn on all the "Power Switch" and of the BMS (Battery Control Modules) as follow step:

Turn on the 1st BMS (Battery Control Modules) of battery string:

The second BMS must be operated after the first battery string's self-check is successful.

From 1st From 1st BMS to the last BMS turn on the battery strings on one by one.

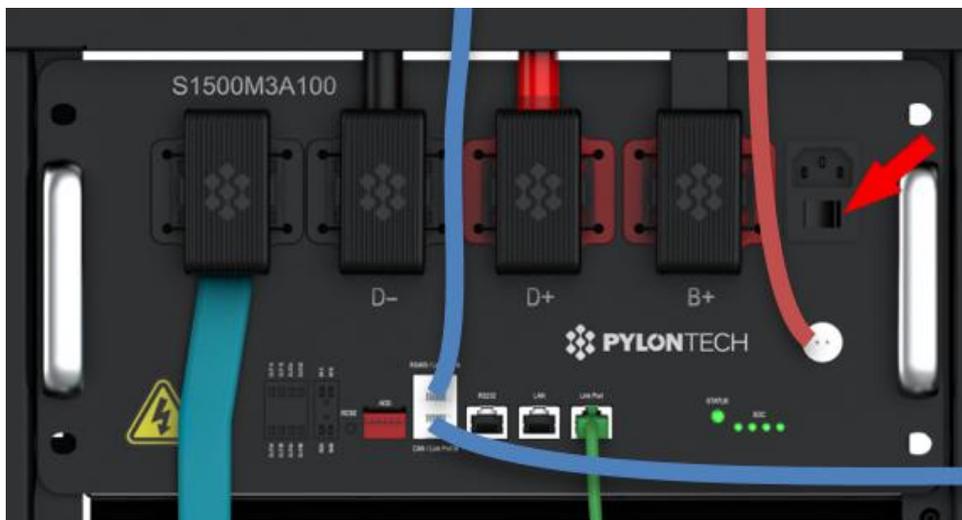

- Self-Check function:

The battery string's system will check itself, if power on successfully the battery string system will entering into self-check mode automatically.

Status LED on BMS/battery all in green - If the BMS and all battery modules are working normally, every status LED will lighting green, that's mean self-check are pass. Self-check will be finish within 5sec.

Status LED on BMS switch to red after 30sec - The BMS can't receive communication from upper equipment because the communication is off, the "STATUS" lamp will light red after 30sec. That doesn't means failure existing, it means this battery string is working normally, just without communication with MBMS/PCS/EMS, power relay remains open



Warning: If has failure during the self-check, must debug the failure then can start next step.

En cas d'échec lors de l'auto-contrôle, vous devez déboguer l'échec pour pouvoir commencer

à l'étape suivante.

Status LED on BMS/battery shows red from beginning - If the "STATUS" lamp shows red from beginning, it means has failure in the battery string, the Power Relays in BMS will open, must debug at first.

Si le voyant "STATUS" est rouge depuis le début, cela signifie qu'il y a une défaillance de la chaîne de batterie, les relais de puissance dans le BMS s'activent et il faut déboguer en premier.

(5) Turn on the Isolating switch or breaker outside of each battery string:



Caution: When the breaker is tripped off because the system has over current or short circuit, must after 30min to turn on it again, otherwise may cause the breaker damage.

Lorsque le disjoncteur est déclenché en raison d'une surcharge de courant ou d'un court-circuit du système, il doit être réactivé après 30 minutes, sinon cela peut endommager le disjoncteur.

(6) Switch the MBMS on after all the BMS turn on successful:



If MBMS is working normally, the "STATUS" lamp will light green. The "STATUS" lamp of the BMS will light green; The Power Relays in BMS will activate after 30 seconds when the MBMS was turned ON.

When the voltage difference between different strings is within the relevant range, these strings will do the parallel operation (Power Relay Close). The strings exceed the voltage difference range will be paralleled later.

Note: If the MBMS can't build communication with other equipment, the system can't work normally. External Power should communicate with battery system through LAN, CAN or Modbus. Otherwise maybe cause battery system work abnormal.



Caution: During first time power on, the system will require to do fully charge progress for SOC calibration purpose.

Attention : Lors de la première mise sous tension, le système devra effectuer une procédure de recharge complète pour l'étalonnage SOC.



Caution: The whole Battery Energy Storage System (BESS) after installation or restart the system when long time not in using should charge it to full at first.

Pour l'ensemble du système de stockage d'énergie de batterie (BESS) après l'installation ou le redémarrage du système après une longue période d'inactivité, il faut le charger complètement au début.

3.6.5 System turns off

During maintenance or long term storage, must turn off the battery system:

- (1) Turn off the switch between PCS and this battery string (PowerCube-M3A-100), or turn off the power switch of PCS, to make sure no current through this battery string.
- (2) Turn off the Isolating switch or breaker outside of each battery string:



Warning: Due to the BMS internally do not contains isolating switch or breaker, only fuse and relay. The mains circuit cannot be manually cut-off while in power on stage. It's mandatory to cut off the isolating switch or breaker externally firstly for safety concern.

Avertissement: En raison du pôle positif BMS en interne, ne contient pas d'interrupteur d'isolement ou de disjoncteur, uniquement un fusible et un relais. Le circuit secteur ne peut pas être coupé manuellement pendant la phase de mise sous tension. Il est obligatoire de couper le sectionneur ou le disjoncteur de l'extérieur en premier lieu pour des raisons de sécurité.

(3) Turn off the “Power Switch” of the BMS.



(4) Turn off the “Power Switch” of the MBMS. If the ESS configures only single battery without MBMS, ignore this operation step.



(5) Turn off the UPS(if has).

The UPS can turn on if have equipment must keep running can't turn off. Otherwise must turn off the UPS to save its power.

L'UPS peut s'allumer si l'équipement doit continuer à fonctionner et ne peut pas s'éteindre. Sinon, vous devez éteindre l'UPS pour économiser son énergie.



Caution: Before change the battery module for service, must charge/discharge the replaced battery same voltage to the other in system battery modules. Otherwise the system need long time to do the balance for this replaced battery module.

Avant de remplacer le module de batterie pour le service, vous devez charger/décharger la



batterie remplacée à la même tension dans les modules de batterie du système. Sinon, le système a besoin d'une longue durée pour équilibrer ce module de batterie remplacé.


Warning: Do not turn off the breaker or isolating switch between battery and PCS **during normal running condition**. Otherwise will cause this battery string current surge by another battery strings. If turned off the “the breaker or isolating switch ” in normal running condition, must first turn off the PCS.



Warning: Do not turn off the “**Power Switch**” during normal running condition.

Otherwise will cause the DC relay of this Control Module adhesion. If turned off the “Power Switch” in normal running condition, must first turn off the PCS.

Ne pas éteindre l'interrupteur d'alimentation pendant le fonctionnement normal. Sinon, cette chaîne de batterie subira une surintensité par une autre chaîne de batterie. Si l'interrupteur d'alimentation s'éteint sous les conditions de fonctionnement normal, il faut d'abord éteindre le PC

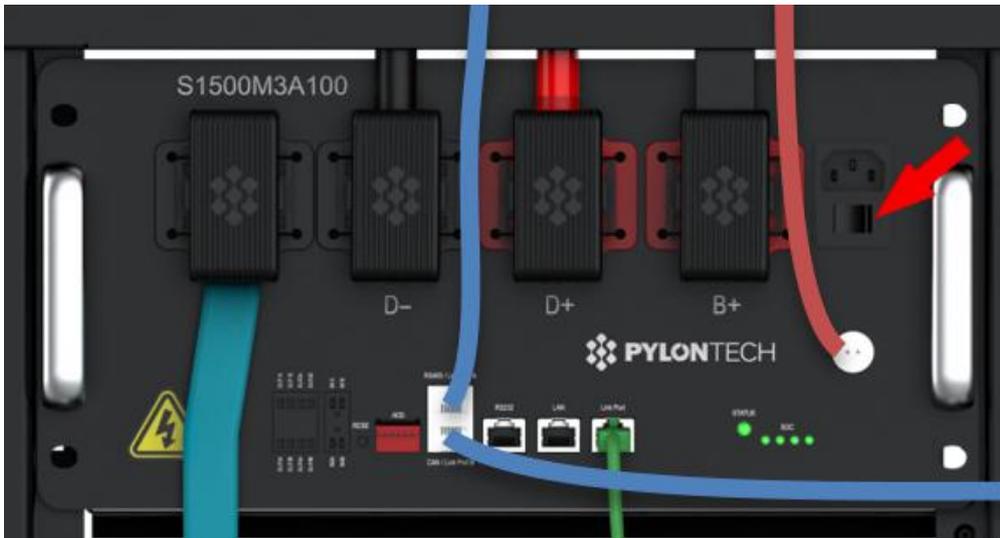

NOTE

After installation, do not forget to register online for full warranty:

www.pylontech.com.cn/service/support

4. System Debug

This system debug is for BESS system (Battery Energy Storage System). BESS system can't do the debug alone. It must operation with configured UPS, PCS and EMS system together.

Debug Step	Content
Prepare of debug.	<p>Turn on the BESS system, refer to chapter 3. Before turn on the whole BESS system turn on the load is not allowed!</p> <p>Remark: Except the BESS, if other equipments have its own system turn on step, must follow its own system operation menu.</p>
System function test.	<p>Each component system debug:</p> <p>Power supply from the External Power Suppler (e.g. UPS) is working normally.</p> <p>Communication Test: Check the communication between the BESS system and communicated devices normal or not, has alarm or not.</p> <p>Power Conversion System Test: Before conjoint test must test the Inverter System turn on progress at first. And check the parameters meet BESS requirement or not.</p> <p>BESS Test: Charge/Discharge test; Test stop charging, stop discharging, current limiting functions, etc.</p> <p>Caution: Before turn on the BESS system must setup all the parameters of the PCS and EMS at first.</p>
Monitor function test. (If configured.)	Check the data of the BESS system is showing on the monitor system normally.
EMS conjoint test (If configured.)	If the EMS system has running monitor requirements, checks the BESS system take action when the EMS send out the instructions.
Trial operation test.	After the system debugged, run the system a period as test (testing with low load), to test the high voltage DC system is fit for the contract.

5. Maintenance

5.1 Trouble Shooting:



Danger: The PowerCube-M3A-100 is a high voltage DC system, operated by qualified and authorized person only.

PowerCube-M3A-100 est un système à courant continu à haute tension, opéré uniquement par le personnel qualifié et autorisé.



Danger: Before check the failure, must check all the cables connection and the BESS system can turn on normally or not.

Danger : Avant le contrôle de panne, il faut contrôler toutes les connexions des câbles et si le système BESS peut s'allumer normalement ou non.

No	Problem	Possible Reason	Solution
1	Turn on the BMS. The Status LED is lighting red. But all battery modules' status LED is lighting green.	<ul style="list-style-type: none"> ● This battery string is under protection. It is possible Over Current or Failure Protection. ● Communication cables failure; ● Battery String is reversed connection. 	<ul style="list-style-type: none"> ● Through the monitor or maintenance software check the battery cell, battery module has alarm or not. ● Check the Communication Cables; ● Reversed connection is serious danger!
2	Turn on the BMS. The BMS's Status LED is lighting red and some the battery module's status LED is lighting green but some is lighting red.	This battery string is under protection. It is possible Over Current, Over Voltage, Low Voltage, Over Temperature, Low Temperature or Failure Protection.	Use the monitor or maintenance software to check the battery cell, battery module has alarm or not.
3	After turn on the BMS power Switch, the BMS still can't turn on.	<ul style="list-style-type: none"> ● External Power Supply or internal DC/DC module is abnormal; 	<ul style="list-style-type: none"> ● Check the external Power Supply is normal nor not. Has it enough power for the system devices

		<ul style="list-style-type: none"> ● Power cable is broken; 	<p>because of setting of UPS.</p> <ul style="list-style-type: none"> ● Check all the power cables and connections are fine or not.
4	<p>Turn on the BMS power Switch. The Status LED shows OK. But can't output power.</p> <p>Turn on and turn off the "POWER OUTPUT" Switch, it has clear mechanic switching sound inside of BMS.</p>	DC Output breaker is fault.	Check the DC output breaker is fault or not. If it is fault, change the control module (BMS module).
5	<p>Turn on the BMS power Switch. The Status LED shows normal. But can't output power.</p> <p>Turn on and turn off the "POWER OUTPUT" Switch, it without clear mechanic switching sound inside of BMS.</p>	Electrical operation for breaker is fault.	Check the Electrical operation for breaker is fault or not. If it is fault, change the control module (BMS module).
6	Turn on the BMS. The Status LED is flashing red.	Self-check can't pass.	If something is wrong, please contact with seller or sells agent.
7	Turn on the BMS. The Status LED is lighting red. And the buzzer is noising.	<ul style="list-style-type: none"> ● Output relay is non-separable switching. ● The buzzer is failure ; ● Output Relay Failure alarm; 	<ul style="list-style-type: none"> ● Check the output relay. If fault find out the short circuit reason. Change the relay or the control module (BMS module). ● Change the control module (BMS module).

8	Turn on the BMS. The Status LED shows normal. But the output relay can't be actuation.	The control wire of output relay is broken.	Check the wire of output relay got loose or broken? Fix it. Or change the control module (BMS module).
9	Turn on the BMS. The one and the following of the battery module's Status LED lighting red or not lighting.	<ul style="list-style-type: none"> ● This battery module has failure; ● Its communication cable failure; ● Its Address Distribution failure. 	<ul style="list-style-type: none"> ● Change this battery module; ● Check the communication cable; ● Check by professional stuff.
10	Single Cell is over voltage/ low voltage. (Check through the monitor or maintenance software.)	<ul style="list-style-type: none"> ● Cell voltage sampling failure. ● Cell failure; 	<ul style="list-style-type: none"> ● Check the wires of cell sampling module; ● Change this battery module.
11	Battery module shows the temperature is -40°C. (Check through the monitor or maintenance software.)	The wires of temperature sampling failure.	Check the wires of temperature sampling module. Or change this battery module.
12	Another failure	Cell failure or electrical board failure.	Can't find out failure point or can't check. Please contact with seller or sells agent.

5.2 Replacement of main component



Danger: The PowerCube-M3A-100 is a high voltage DC system, operated by qualified and authorized person only.

PowerCube-M3A-100 est un système à courant continu à haute tension, opéré uniquement par le personnel qualifié et autorisé.

Danger: Before replace the main component must shut off the maintenance battery string's power. Must confirm the **D+** and **D-** terminal are without power. The turn off progress refer to chapter 3.6.5.

5.2.1 Replacement of Battery Module

A new battery module can be add onto an existing system at any time. Please make sure the new battery module has an equivalent voltage level (OCV) compare to existing modules. In a serial connection system, the new module, even has a higher SOH, will follow the system worst SOH condition module to perform.

5.2.1.1 Make sure the new battery module has an equivalent voltage level (OCV) compare to existing modules.

5.2.1.2 Shut off the whole battery string's power. Must confirm the **D+** and **D-** terminal are without power. The turn off progress refer to chapter 3.6.5.

5.2.1.3 Pull out the Plug of Power Cable +/- . Pull out the plug of communication cable.



Danger: the power cables and plugs still have high voltage DC power from serial connected battery modules (battery module can't be turned off), must be careful to handle the Power plugs.

Les câbles d'alimentation et les fiches sont toujours alimentés en courant continu à haute tension par les modules de batterie connectés en série (le module de batterie ne peut pas être éteint), vous devez donc manipuler les fiches avec précaution.

5.2.1.4 Dismantle the 4 screws of the battery module's front face.



5.2.1.5 Handle the battery module out of the rack, and put it to the appoint place.

Warning: Single battery module is 55kg. If without handling tools must more than 3 personnel to handling with it. If install in high place of the rack it must more than 4 personnel.

Un module de batterie pèse 55 kg. Sans outils de manipulation, il est nécessaire de plus de 3 hommes pour manipuler avec lui. Si vous l'installez en hauteur, il faut plus de 4

5.2.1.6 Install the new battery module (see before 5.2.1.1). And connect the normal cables. Refer to chapter 3.5.


5.2.1.7 Turn on this battery string. Refer to chapter 3.6.

5.2.1.8 Make a fully charge of the system before normal operation.

5.2.2 Replacement of Control Module (BMS)

5.2.1.1 Shut off the whole battery string's power. Must confirm the **D+** and **D-** terminal are without power. The turn off progress refer to chapter 3.6.5.


5.2.2.2 Pull out the plugs of Power Cables and the communication plugs.

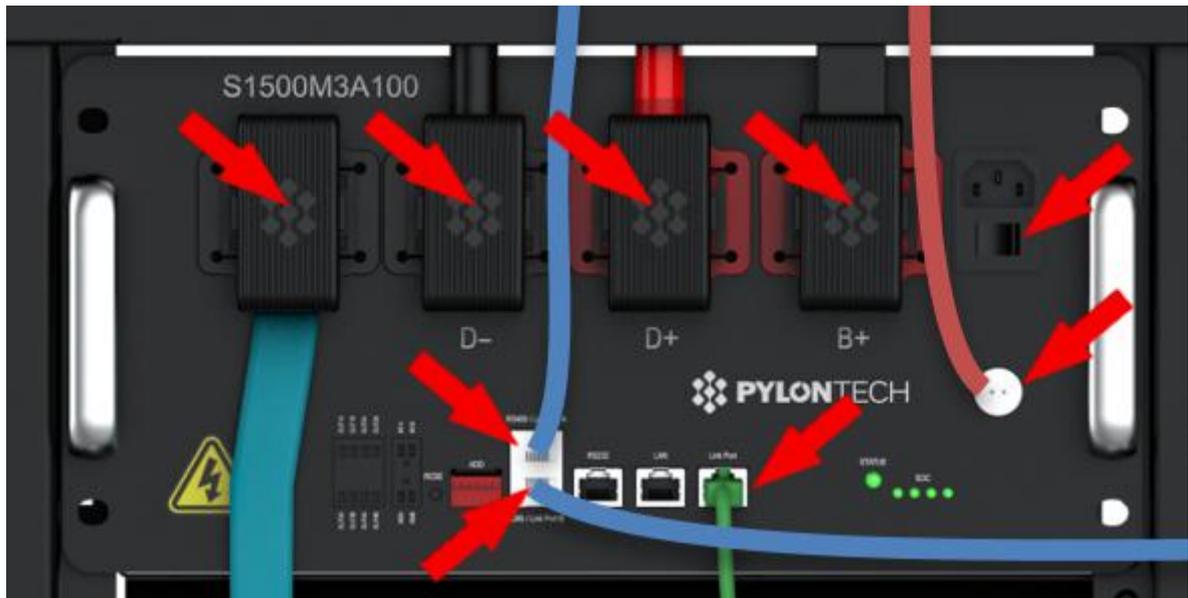

Danger: the power cables still have high voltage DC power from another battery modules, must be careful to handle the Power plugs.

Les câbles d'alimentation sont toujours alimentés en CC à haute tension par d'autres modules de batterie; vous devez manipuler les fiches d'alimentation avec soin.

5.2.2.3 Dismantle the 4 screws of the battery module's front face.

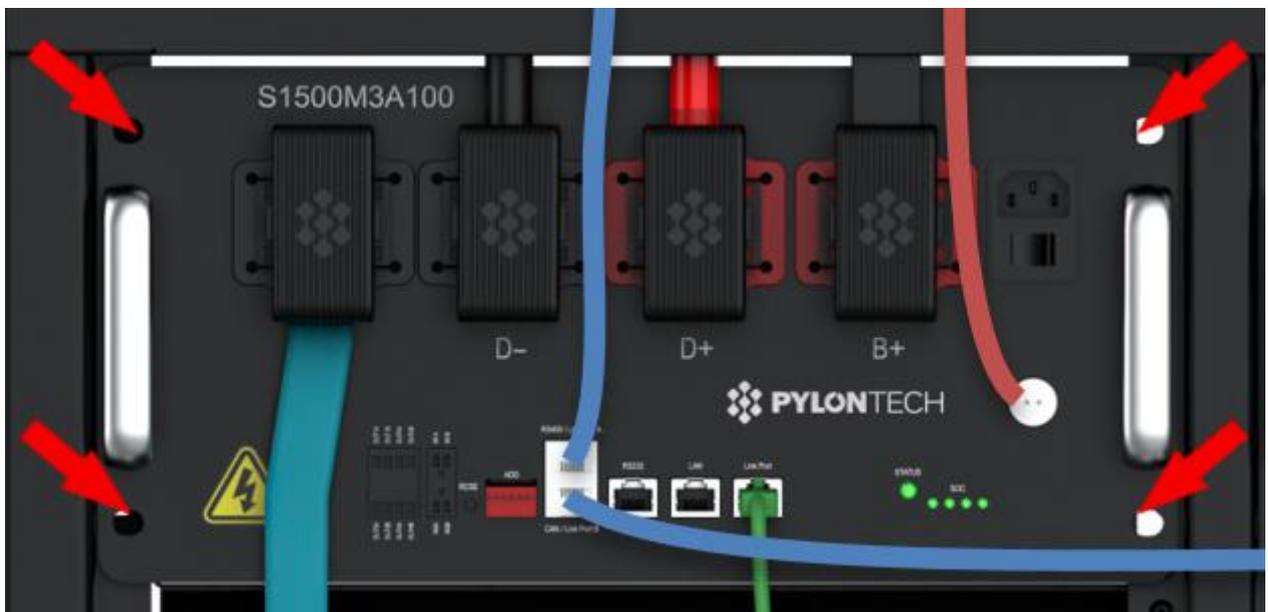

5.2.2.4 Install the new control module (BMS). And reconnect all the cables. Refer to chapter 3.5.

5.2.2.5 Turn on this battery string. Refer to chapter 3.6.



Caution: Before pull out the communication cables must mark the cable number, to avoid cable wrong sequence.

Avant de débrancher les câbles de communication, vous devez marquer leurs numéros afin d'éviter toute séquence incorrecte.

5.2.3 Replacement of 3rd level Control Module (MBMS)


5.2.3.1 Turn off the Power Switch. Refer to chapter 3.6.5.



Caution: Turn off this MBMS will stop the power output of belonging whole Battery Energy Storage System.

La désactivation de ce MBMS arrêtera la sortie de puissance du système de stockage d'énergie de batterie.

5.2.3.2 Dismantle the 4 screws.

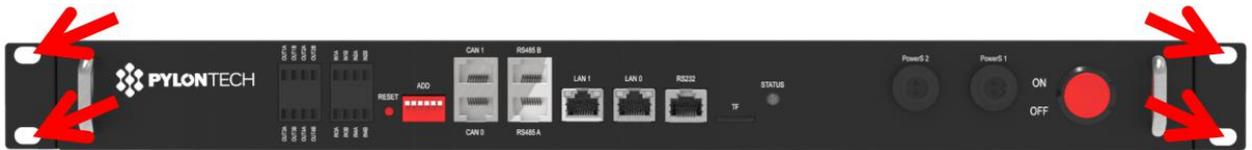

5.2.3.3 Install the new MBMS inside. And reconnect the cables. Refer to chapter 3.5.

5.2.3.4 Turn on this MBMS. Refer to chapter 3.6.



Caution: Before pull out the communication cables must mark the cable number, to avoid cable wrong sequence.

Avant de débrancher les câbles de communication, vous devez marquer leurs numéros afin d'éviter toute séquence incorrecte.

5.3 Battery Maintenance



Danger: The maintenance of battery must done by qualified and authorized person only.

La maintenance de la batterie doit être effectuée uniquement par le personnel qualifié et autorisé.

Danger: Some maintenance items must shut off at first.

Certains items de maintenance doivent être arrêtés en premier.

5.3.1 Voltage Inspection:

[Periodical Maintenance] Check the voltage of battery system through the monitor system. Check the system abnormal voltage or not. For example: Single cell's voltage is abnormal high or low.

5.3.2 SOC Inspection:

[Periodical Maintenance] Check the SOC of battery system through the monitor system. Check the battery string abnormal SOC or not.

5.3.3 Cables Inspection:

[Periodical Maintenance] Visual inspect all the cables of battery system. Check the cables has broken, aging, getting loose or not.

5.3.4 Balancing:

[Periodical Maintenance] The battery strings will become unbalance if long time not be full charged. Proposal: every 3 month should do the balancing maintenance (charge to full).

5.3.5 Output Relay Inspection:

[Periodical Maintenance] Under low load condition (low current), control the output relay OFF and ON to hear the relay has click voice, that's mean this relay can off and on normally.

5.3.6 History Inspection:

[Periodical Maintenance] Analysis the history record to check has accident (alarm and protection) or not, and analysis its reason.

5.3.7 Shutdown and Maintenance:

[Periodical Maintenance] Some battery function must be restart the ESS then can do the maintenance. So it must minimal 6 months do once.

5.3.8 Recycle

NOTE

Damaged batteries may leak electrolyte or produce flammable gas.

In case a damaged battery needs recycling, it shall follow the local recycling regulation (ie.

Regulation (EC) N° 1013/2006 among European Union) to process, and using the best available techniques to achieve a relevant recycling efficiency.

6. Storage Recommendations

For long-term storage, if stored for a long time (more than 3 months), the battery cells should be stored in the temperature range for 5~45°C, relative humidity <65% and contains no corrosive gas environment.

The battery should be shelved in 5~45°C, dry, clean and well ventilated environment. Before storage the battery should be charged to 50~55% SoC;

It is recommended to discharge and charge the battery every 3 months, and the longest discharge and charge interval shall not exceed 6 months.



Caution: If not follow the above instructions for long term store the battery, The cycle life will have relative heavily reduction.

Si vous ne suivez pas les instructions ci-dessus pour stocker la batterie à long terme, cela réduira son cycle de vie.


7. Shipment

For single battery cell will as 55%SOC or according to customer requirement before shipment. The remaining capacity of battery cell, after shipment and before charge, is determined by the storage time and condition.

1. The battery modules meet the UN38.3 certificate standard.
2. In particular, special rules for the carriage of goods on the road and the current dangerous goods law, specifically ADR (European Convention on the International Carriage of Dangerous Goods by Road), as amended, must be observed.

Annex 1: Cable connection diagram (CAN ≤ 6 set)

12V DC Power Cable from BMS Controller 12VDC OUT or AC/DC Adaptor from AC output socket of the UPS

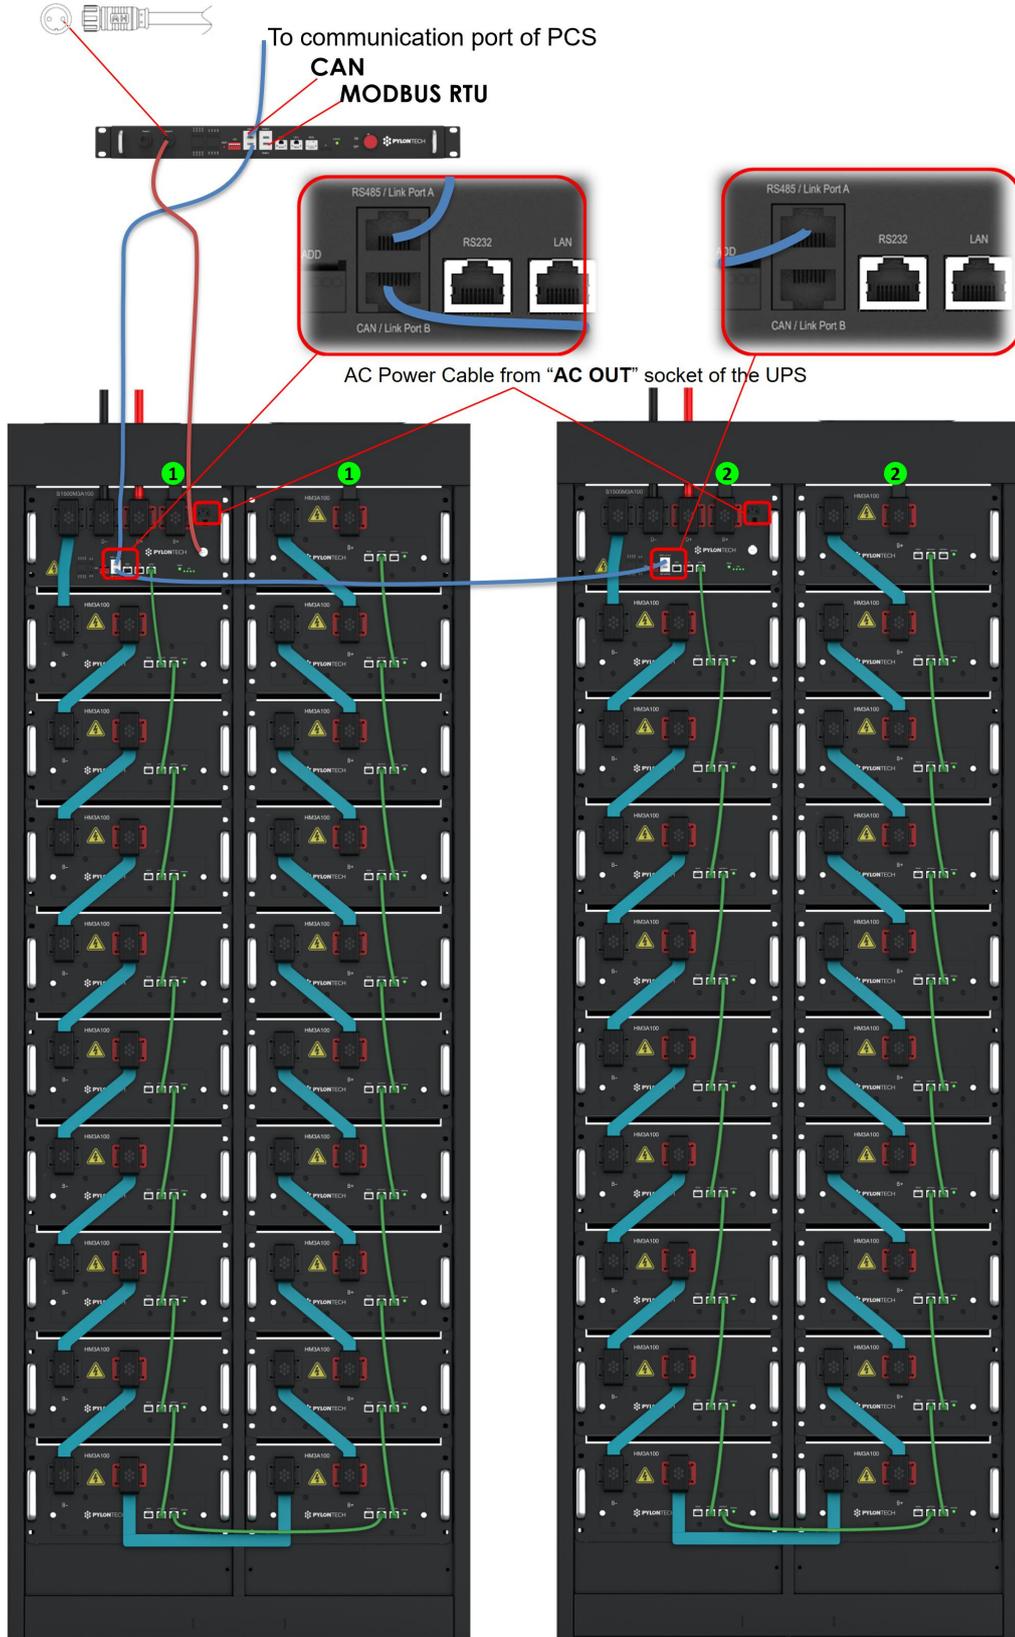


Annex 2: Cable connection diagram (Ethernet)

12V DC Power Cable from **12VDC OUTPUT** or **AC/DC Adaptor** from AC output socket of the **UPS**

To the supervisory equipment (e.g. PCS or EMS)

To the **"AC OUT"** socket of the UPS

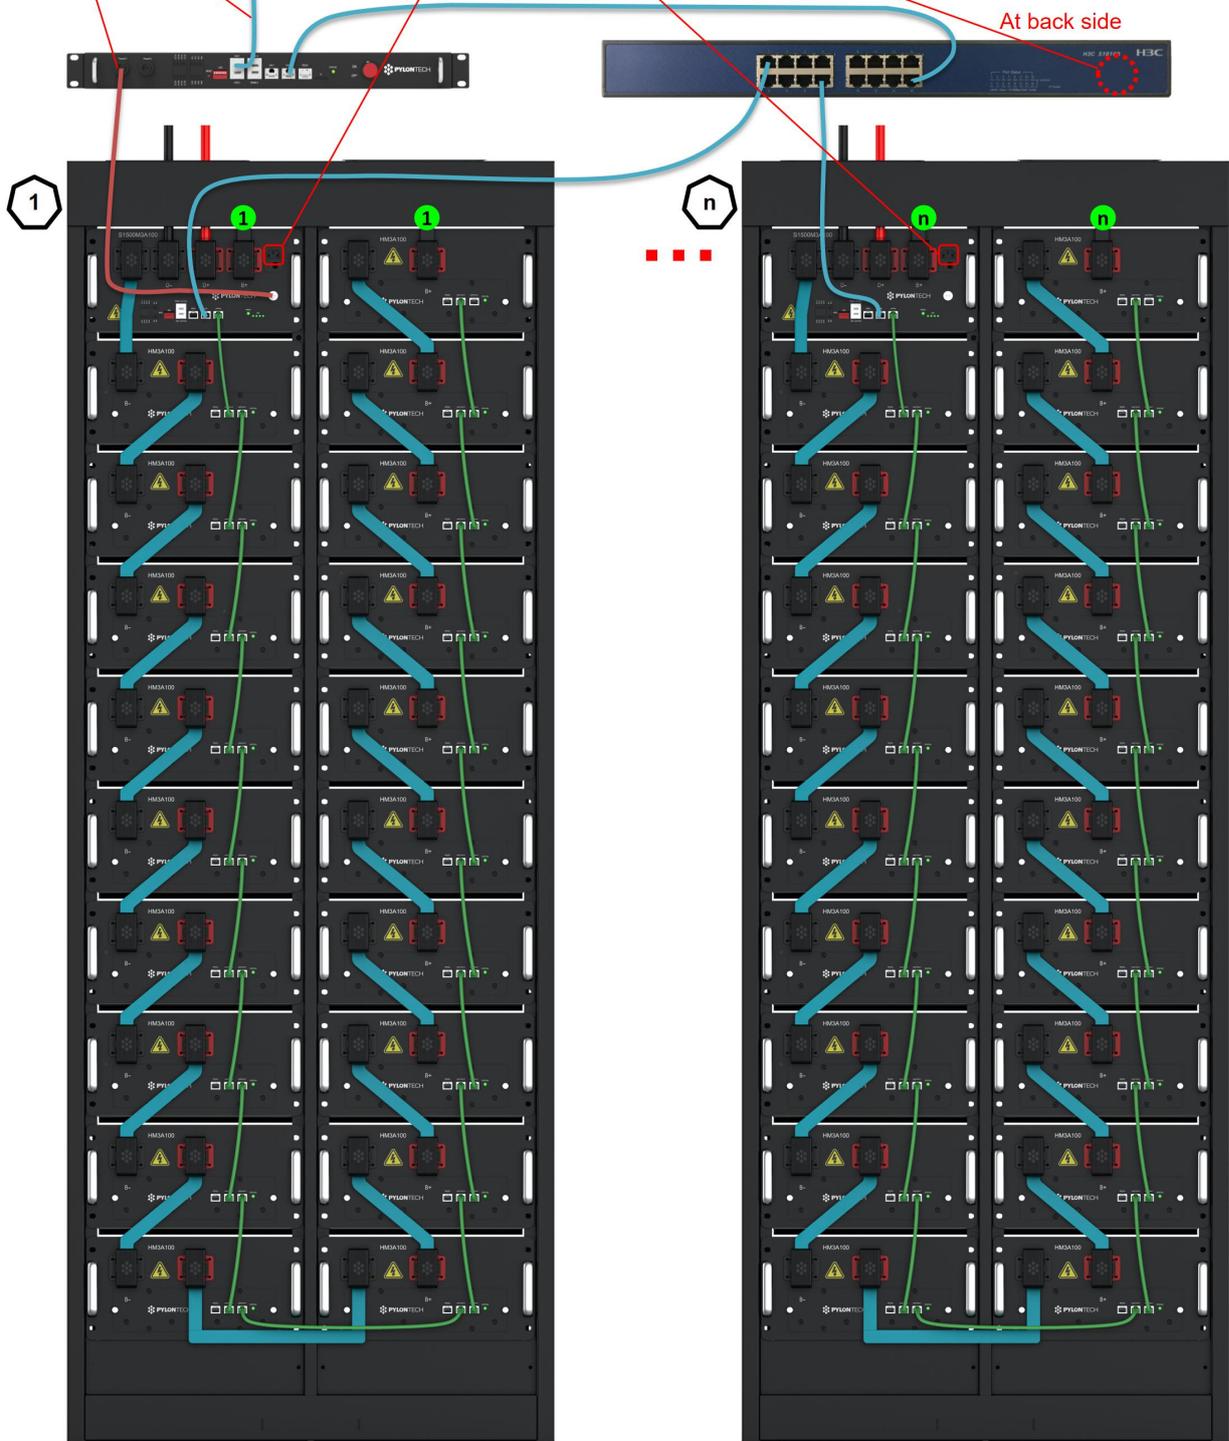

Annex 3: Installation and System Turn ON Progress List

Tick after completion	No.	Item	Remark
<input type="checkbox"/>	1	The environment is meeting all technical requirements. 3.3.1 Cleaning 3.3.2 Temperature 3.3.3 Radiating System 3.3.4 Heating System 3.3.5 Fire-extinguisher System 3.3.6 Grounding System	Refer to chapter 3.3
<input type="checkbox"/>	2	Battery rack is installed follow the technical requirements.	Refer to chapter 3.5.3.
<input type="checkbox"/>	3	Control Module (BMS) and Battery Module are installed well. And install the rack metal strip.	Refer to chapter 3.5.4.
<input type="checkbox"/>	4	The MBMS are installed well. (If configured.)	Refer to chapter 3.5.5.
<input type="checkbox"/>	5	The Ethernet Switch is installed well. (If configured.)	Refer to chapter 3.5.6.
<input type="checkbox"/>	6	Connect the AC power cables from BMS, MBMS and Ethernet Switch to the AC "OUT PUT" socket of the UPS. (If configured.)	Refer to chapter 3.6.2.1 or 3.6.2.2.
<input type="checkbox"/>	7	Connect External Power Cable +/- between each BMS to the PCS or confluence cabinet.	Refer to chapter 3.6.2.1 or 3.6.2.2.
<input type="checkbox"/>	8	Connect power cables of each battery string.	Refer to chapter 3.6.2.1 or 3.6.2.2.
<input type="checkbox"/>	9	Connect communication cables of each battery string.	Refer to chapter 3.6.2.1 or 3.6.2.2.
<input type="checkbox"/>	10	Set up ADD switch of every BMS and the MBMS (Address Assignment).	Refer to chapter 3.6.3.
<input type="checkbox"/>	11	Connect external communication cables from BMS to Ethernet Switch, MBMS or another	Refer to chapter 3.6.2.1 or 3.6.2.2.
<input type="checkbox"/>	13	Connect the communication cable from MBMS to the PCS.	Refer to chapter 3.6.2.1 or 3.6.2.2.
<input type="checkbox"/>	14	Double check every power cables, communication cables installed well. And ADD Switches are setting right.	Refer to chapter 3.6.2.1 or 3.6.2.2 and 3.6.3.

<input type="checkbox"/>	15	Check the UPS is turned on. And the UPS is power supplying.	Refer to chapter 3.6.4.
<input type="checkbox"/>	16	Switch the external power or PCS on, to sure all the power equipments can work normally.	Refer to chapter 3.6.4.
<input type="checkbox"/>	17	<p>Turn the BMS (Battery Control Modules) of each battery string on (from 1st BMS to the last, one by one)</p> <ul style="list-style-type: none"> ● Turn on the “POWER OUTPUT SWITCH”: ● Turn on the “Power Switch”: ● The battery string's system will check itself, if work normal the battery string system will goes into self-check mode. <p style="padding-left: 40px;">If has failure during the self-check, must debug the failure then can start next step.</p>	Refer to chapter 3.6.4.
<input type="checkbox"/>	18	<p>If every battery string are working normally.</p> <p>Then switch the MBMS on. The MBMS will self-check and check each battery string one by one.</p>	Refer to chapter 3.6.4.
<input type="checkbox"/>	19	<p>The first installation should do full charging progress.</p> <p>After MBMS has communicated with each BMS, it will run parallel operation. It will begin from lowest voltage battery string to do the parallel operation during the charging.</p> <p>If the status LED of BMS turns to green, it means this battery string is in parallel operation.</p>	The first installation should do full charging progress.

Annex 4: System Turn OFF Progress List

Tick after completion	No.	Item	Remark
<input type="checkbox"/>	1	Turn off the switch between PCS and this battery string (PowerCube-M3A-100), or turn off the power switch of PCS, to make sure no current through this battery string.	Refer to chapter 3.6.5.
<input type="checkbox"/>	2	Turn off the "Power Output Switch" of the BMS.	Refer to chapter 3.6.5.
<input type="checkbox"/>	3	Turn off the "Power Switch" of the BMS.	Refer to chapter 3.6.5.
<input type="checkbox"/>	4	Turn off the "Power Switch" of the MBMS.	Refer to chapter 3.6.5.
<input type="checkbox"/>	5	Turn off the UPS. <ul style="list-style-type: none"> ● The UPS can turn on to check the equipment (PCS or battery system etc.). Otherwise must turn off the UPS to save its power. 	Refer to chapter 3.6.5.



PYLONTECH

Pylon Technologies Co., Ltd.

No. 73, Lane 887, ZuChongzhi Road, Zhangjiang Hi-Tech Park

Pudong, Shanghai 201203, China

T+86-21-51317699 | **F** +86-21-51317698

E service@pylontech.com.cn

W www.pylontech.com.cn